


YASHICA

FX-2

ASSEMBLING CHART




YASHICA CO., LTD.
T O K Y O J A P A N

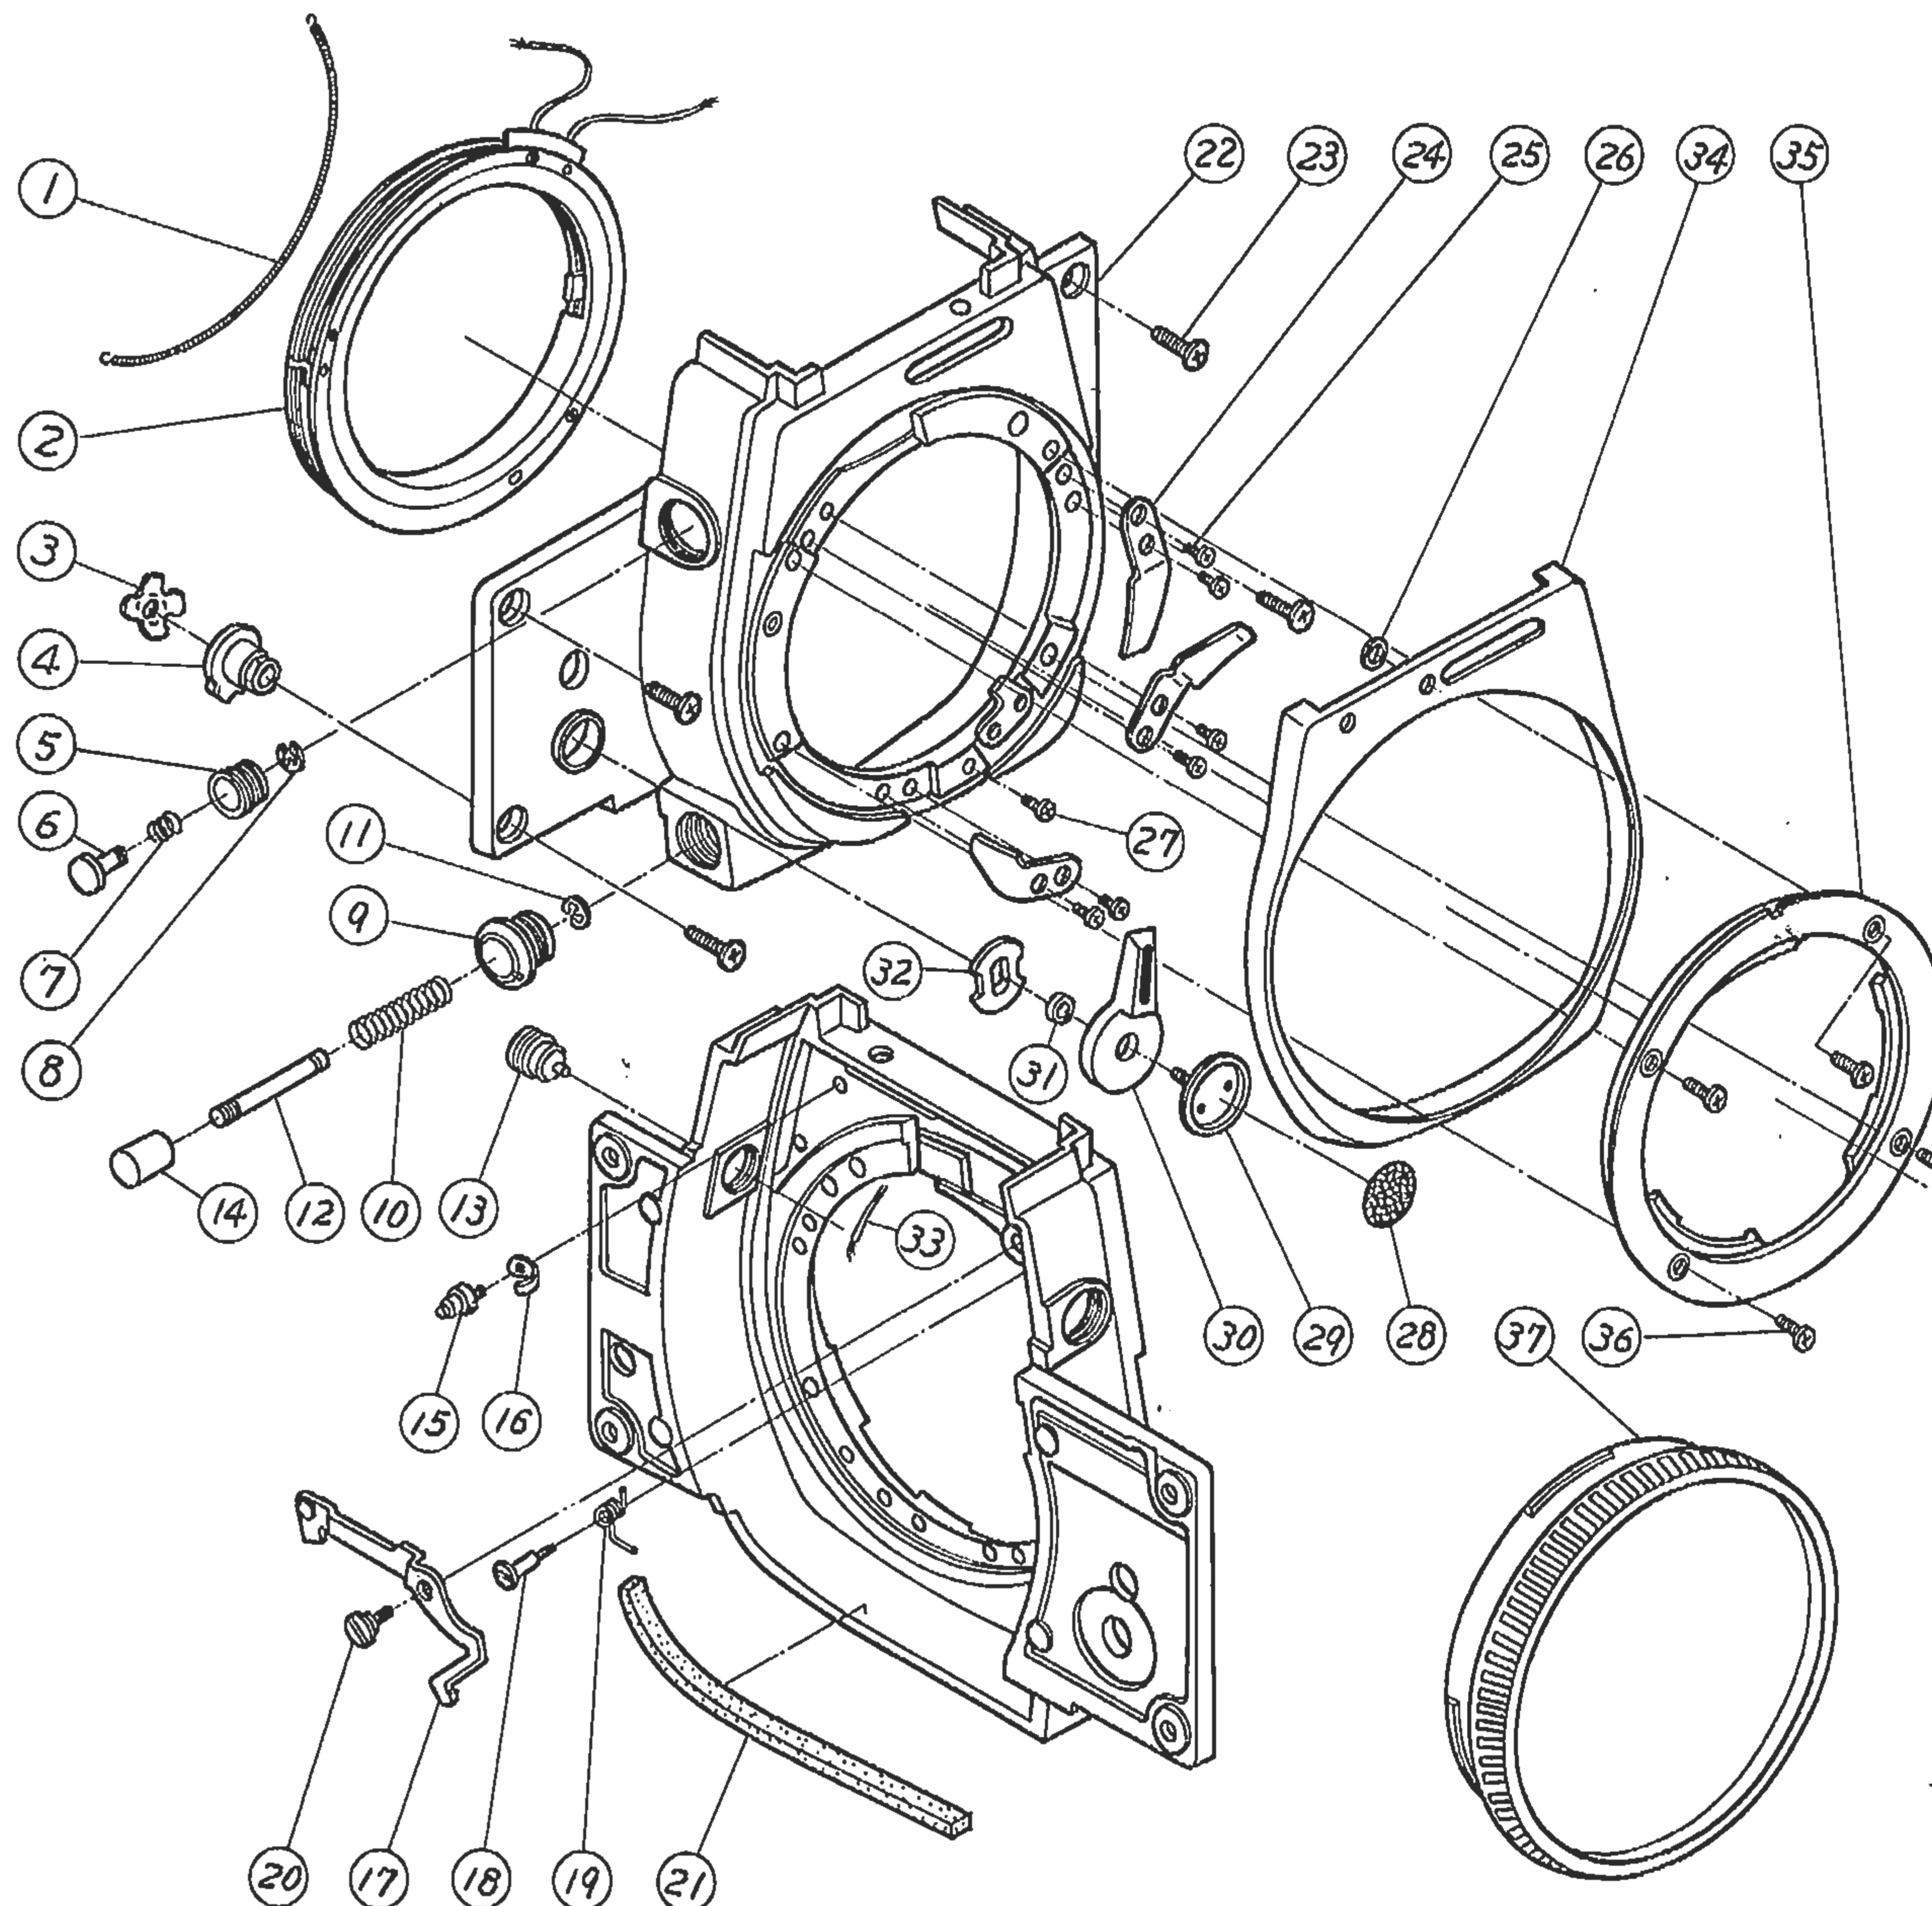

| | PARTS NO | DESCRIPTION | QTY |
|----|----------|--------------------------------|-----|
| 1 | 133161 | Aperture Resistor Ring Spring | 1 |
| 2 | 133021 | Aperture Resistor Ass'y | 1 |
| 3 | 170634 | Plate Spring | 1 |
| 4 | 121037 | Self-timer Driving Plate Ass'y | 1 |
| 5 | 128153 | Lens Lock Button Holder | 1 |
| 6 | 128154 | Lens Lock Button | 1 |
| 7 | 128155 | Lens Lock Button Spring | 1 |
| 8 | 66101225 | Snap Ring (E-12) | 1 |
| 9 | 128146 | Diaphragm Button Holder | 1 |
| 10 | 131809 | Diaphragm Button Spring | 1 |
| 11 | 66101524 | Snap Ring (E-15) | 1 |
| 12 | 128145 | Diaphragm Button Shaft | 1 |
| 13 | 650083 | Synchro Terminal Ass'y | 1 |
| 14 | 128147 | Diaphragm Button | 1 |
| 15 | 133162 | Aperture Ring Spring Post (A) | 1 |
| 16 | 110928 | Lead Wire Holder | 1 |
| 17 | 128088 | Lock Lever Ass'y | 1 |
| 18 | 128198 | Lock Lever Spring Shaft | 1 |
| 19 | 128160 | Lock Lever Spring | 1 |
| 20 | 128159 | Lock Lever Shaft | 1 |
| 21 | 170070 | Light-proof Moquette | 1 |
| 22 | ★ | Mount Base Sub Ass'y | 1 |
| 23 | 128128 | Mount Base S.S. | 4 |
| 24 | 128149 | Mount Spring | 3 |
| 25 | 61911824 | Mount Spring S.S. | 6 |
| 26 | 60132610 | Adjusting Washer | |
| 27 | 61912524 | Setting Screw | 3 |
| 28 | 128182 | Self Lever Leather | 1 |
| 29 | 128181 | Self-timer Lever S.S. | 1 |
| 30 | 128180 | Self-timer Lever | 1 |
| 31 | 121142 | Self Lever Collar | 1 |
| 32 | 121141 | Self Lever Base | 1 |
| 33 | 133525 | Synchro Lead Wire (C) | 1 |
| 34 | 128144 | Mount Cover | 1 |
| 35 | 128150 | Lens Mount | 1 |
| 36 | 61923521 | Setting Screw | 4 |
| 37 | 128118 | Body Cap | 1 |

| OTHER ASSEMBLY PARTS | ORDER NO. | DESCRIPTION (FIG. NO.) |
|----------------------|-----------|------------------------|
| Mount Base Ass'y | 133068 | 1 ~ 36. |


NOTE: (parts with marked "★" are not available.)

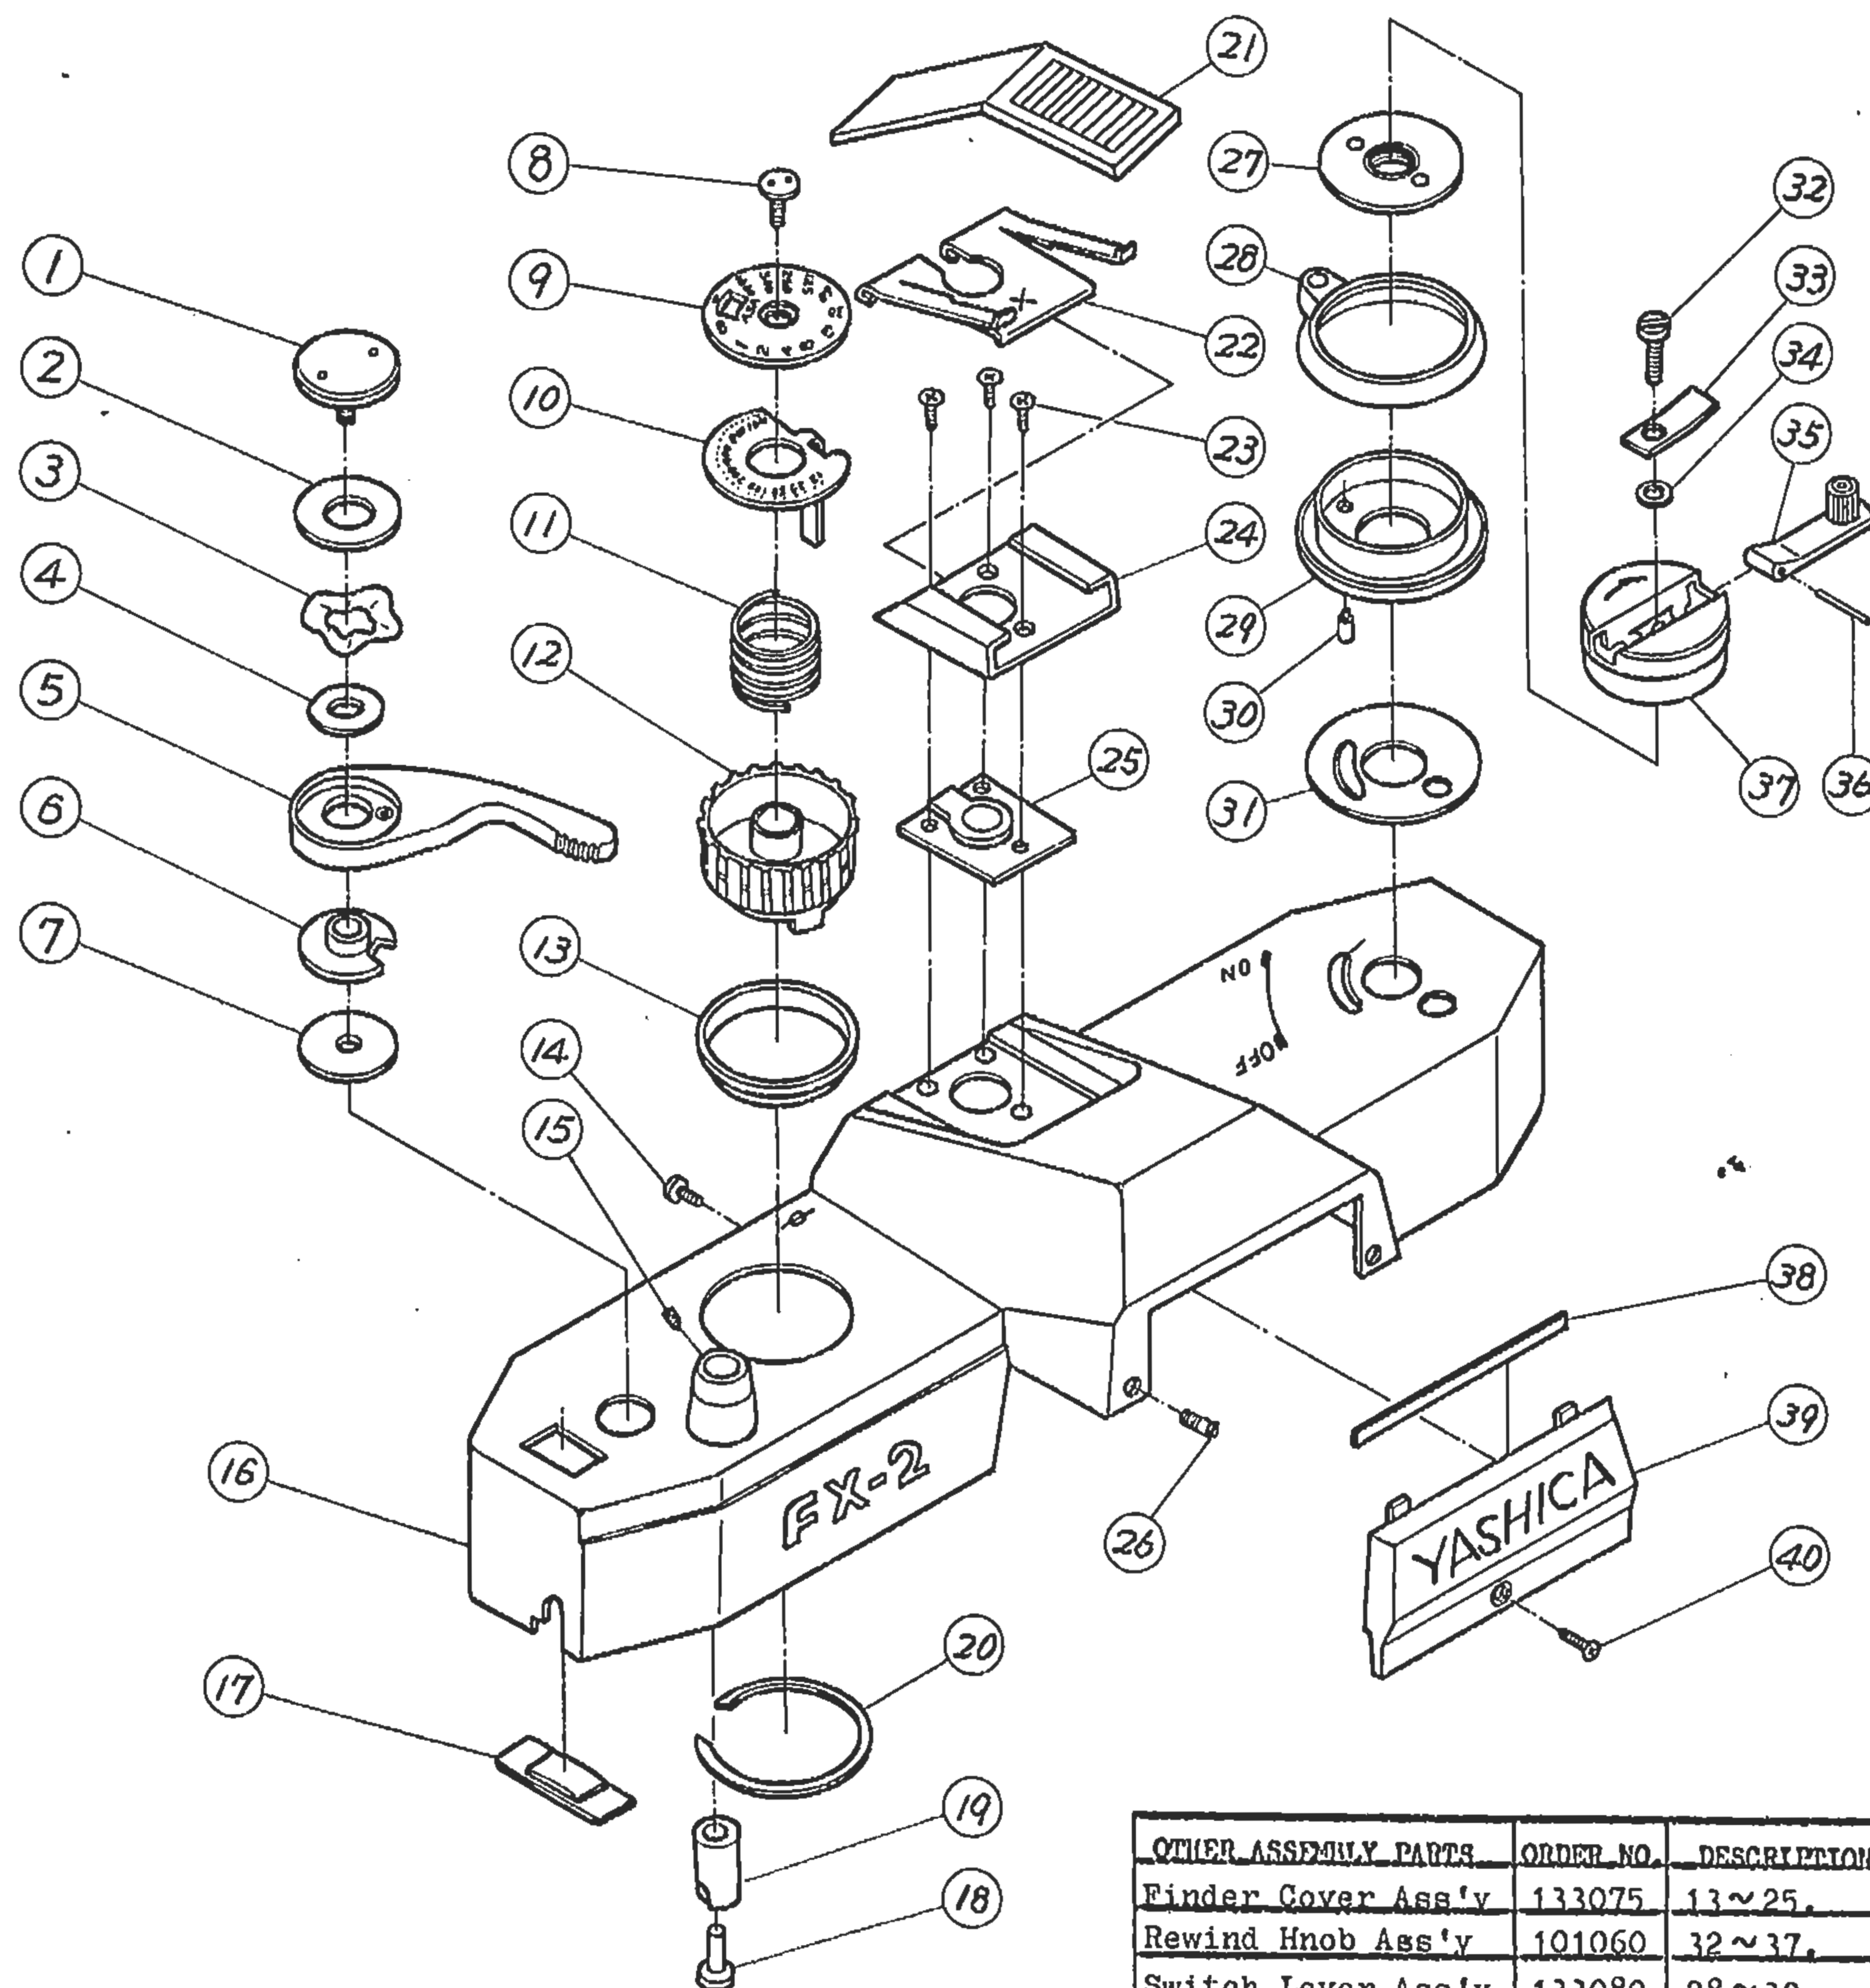

| OTHER ASSEMBLY PARTS | ORDER NO. | DESCRIPTION |
|----------------------|-----------|-------------|
| Finder Cover Ass'y | 133075 | 13~25. |
| Rewind Knob Ass'y | 101060 | 32~37. |
| Switch Lever Ass'y | 133080 | 28~30. |

| PARTS NO | DESCRIPTION | QTY |
|-------------|-----------------------------------|-----|
| 1 128658 | Winding Lever S.S. | 1 |
| 2 170230 | Winding Lever Friction SP Washer | 1 |
| 3 121659 | Winding Lever Friction Spring | 1 |
| 4 60327124 | Adjusting Washer | |
| 5 121077 | Winding Lever Ass'y | 1 |
| 6 170225 | Winding Lever Base | 1 |
| 7 121640 | Winding Lever Spacer (I) | 1 |
| 121641 | Winding Lever Spacer (II) | |
| 121642 | Winding Lever Spacer (III) | |
| 8 133298 | Name Plate S.S. | 1 |
| 9 133297 | Shutter Dial Plate | 1 |
| 10 133295 | ASA Name Plate | 1 |
| 11 133294 | ASA Changing Spring | 1 |
| 12 133296 | Shutter Dial | 1 |
| 13 133193 | Shutter Dial Holder | 1 |
| 14 170004 | Finder Cover S.S. | 1 |
| 15 61902022 | Setting Screw | 1 |
| 16 ★ | Finder Cover Sub Ass'y | 1 |
| 17 128853 | Counter Window | 1 |
| 18 104222 | Release Button Guide | 1 |
| 19 104207 | Release Button | 1 |
| 20 133194 | Shutter Dial Holder Setting Shaft | 1 |
| 21 128115 | Back Light-proof Plate | 1 |
| 22 128110 | Shoe Dress Plate | 1 |
| 23 61823022 | Setting Screw | 3 |
| 24 128109 | Accessory Shoe | 1 |
| 25 128113 | Contact Ass'y | 1 |
| 26 128127 | Front Plate S.S. | 1 |
| 27 133493 | Switch Lever Ring Stopper | 1 |
| 28 ★ | Switch Lever | 1 |
| 29 ★ | Switch Lever Ring | 1 |
| 30 ★ | Switch Click Pin | 1 |
| 31 133494 | Switch Lever Washer | 1 |
| 32 121686 | Rewind Shaft Plate SP S.S. | 1 |
| 33 170705 | Rewind Shaft Plate Spring | 1 |
| 34 60113110 | Adjusting Washer | |
| 60123110 | Adjusting Washer | |
| 35 ★ | Rewind Crank Arm Ass'y | 1 |
| 36 170710 | Rewind Crank Arm Shaft | 1 |
| 37 170701 | Rewind Knob | 1 |
| 38 128806 | Aperture Scale Plate Fixer | |
| 39 128156 | Front Name Plate | 1 |
| 40 63713521 | Setting Screw | 1 |

NOTE: (Parts with marked "★" are not available.)

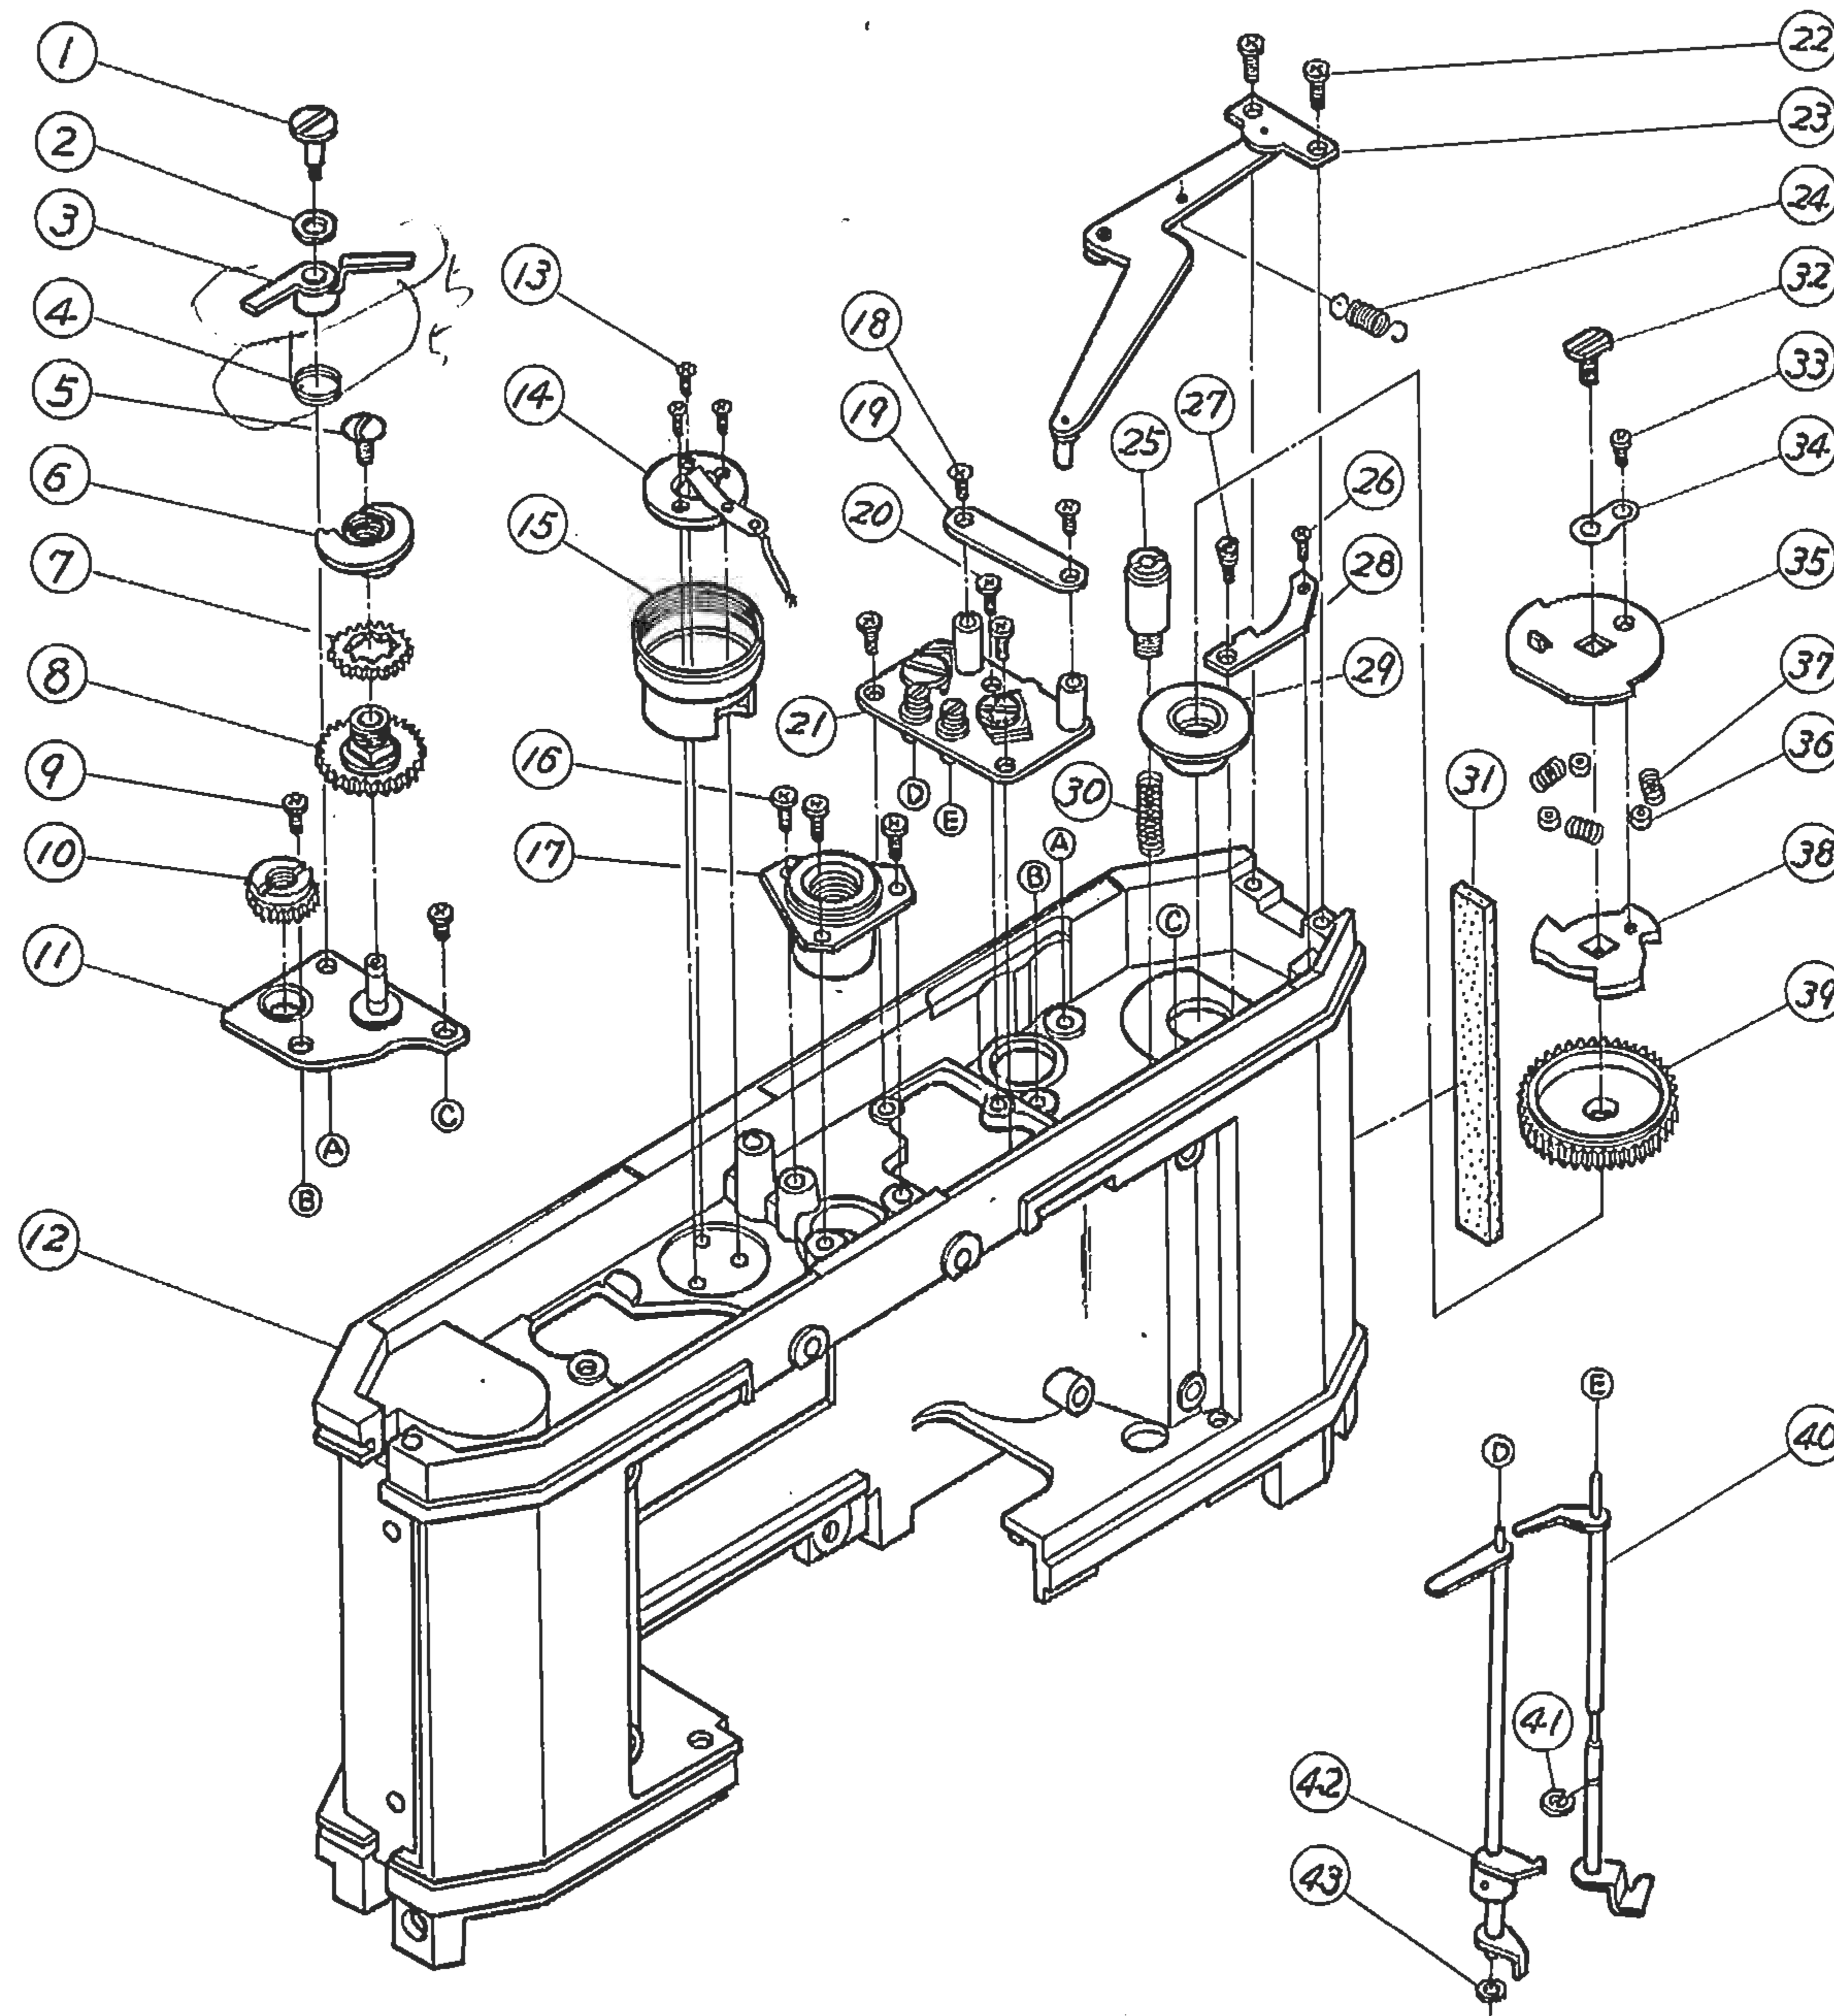

| PARTS NO | DESCRIPTION | QTY |
|-------------|-----------------------------------|-----|
| 1 121629 | Rewind Release Lever Shaft | 1 |
| 2 60653110 | Adjusting Washer | 1 |
| 60113110 | Adjusting Washer | |
| 3 121004 | Rewind Release Lever Ass'y | 1 |
| 4 121628 | Rewind Release Lever Spring | 1 |
| 5 121663 | Intermediate Gear S.S. | 1 |
| 6 128679 | Mirror Cocking Cam | 1 |
| 7 170220 | Intermediate Gear (Upper) | 1 |
| 8 170221 | Intermediate Gear (Lower) | 1 |
| 9 63922824 | Setting Screw | 2 |
| 10 170247 | Sprocket Gear (Lower) | 1 |
| 11 121003 | Winding Base Plate Ass'y | 1 |
| 12 ★ | Body | 1 |
| 13 61813028 | Setting Screw | 3 |
| 14 126073 | Battery Box Contact Ass'y | 1 |
| 15 170081 | Battery Box | 1 |
| 16 61924024 | Setting Screw | 3 |
| 17 170006 | Tripod Socket | 1 |
| 18 61813024 | Setting Screw | 2 |
| 19 128672 | Mirror Set Slide Plate (B) | 1 |
| 20 63913024 | Setting Screw | 3 |
| 21 133033 | Switch Shaft Holder Base Ass'y | 1 |
| 22 61813024 | Setting Screw | 2 |
| 23 133034 | Mirror Winding Lever Ass'y | 1 |
| 24 133676 | Mirror Winding Lever Spring | 1 |
| 25 128210 | Shift Shaft Metal | 1 |
| 26 61813524 | Setting Screw | 1 |
| 27 133616 | Winding Control Plate S.S. | 1 |
| 28 104607 | Winding Limit Plate | 1 |
| 29 121187 | Spool Lower Bearing | 1 |
| 30 121438 | Shift Shaft Spring | 1 |
| 31 121146 | Body Light-proof Moltopren (B) | 1 |
| 32 121633 | Winding Shaft Set S.S. | 1 |
| 33 61912024 | Setting Screw | 1 |
| 34 170232 | Winding Shaft S.S. Washer | 1 |
| 35 128629 | Winding Cam Plate | 1 |
| 36 170214 | Winding Roller | 3 |
| 37 121618 | Roller Holding Spring | 3 |
| 38 170213 | Winding Clutch Plate | 1 |
| 39 170212 | Winding Gear | 1 |
| 40 121039 | Governor Change Shaft Ass'y | 1 |
| 41 121336 | Snap Ring | 1 |
| 42 121040 | Connecting Rod Ass'y | 1 |
| 43 60111510 | Adjusting Washer | (1) |
| 60121510 | Adjusting Washer | (1) |

NOTE: (Parts with marked "★" are not available.)


#3 13308310 New Type

| PARTS NO | DESCRIPTION | QTY |
|------------------------------------|---|-----|
| 1 | 133072 Switch Click Plate Ass'y | 1 |
| 2 | 61913024 Setting Screw | 2 |
| 3 | 133083 Print Circuit Ass'y | 1 |
| 4 | 121683 Rewind Shaft Spring | 1 |
| 5 | 63912224 Setting Screw | 3 |
| 6 | ★ Rewind Shaft Holder | 1 |
| 7 | ★ Rewind Shaft | 1 |
| 8 | 66701520 Steel Ball | 1 |
| 9 | 133496 Switch Click Spring | 1 |
| 10 | 61901424 Setting Screw | 1 |
| 11 | ★ Back Cover Hinge Shaft | 1 |
| 12 | 121431 Winding Stud | 1 |
| 13 | ★ Back Cover Hinge | 1 |
| 14 | 61813024 Setting Screw | 3 |
| 15 | 133529 Print Circuit Setting Pole | 2 |
| 16 | 63928024 Setting Screw | 2 |
| 17 | 650051 Strap Holder | 2 |
| 18 | 65006100 Strap Holder Ring | 2 |
| 19 | 104605 Lock Plate | 1 |
| 20 | 170010 Lock Plate Collar | 2 |
| 21 | 133190 Front Leather (A) | 1 |
| 22 | 110039 Body Front Light-proof Moltopren | 6 |
| 23 | 110928 Cord Holder | 1 |
| 24 | 61911524 Setting Screw | 1 |
| 25 | 121122 Lock Plate Spring | 1 |
| 26 | ★ Back Cover Ass'y | 1 |
| 27 | 101184 Back Cover Light-proof Stuff (II) | 2 |
| 28 | 128142 Back Cover Leather | 1 |
| 29 | 61813524 Setting Screw | 2 |
| 30 | 104606 Lock Plate Cover | 1 |
| 31 | 170032 Back Cover Light-proof Stuff | 1 |
| 32 | 101013 Film Pressure Plate Ass'y | 1 |
| 13308310 Print Circuit Ass'y (New) | | |

| OTHER ASSEMBLY PARTS | ORDER NO. | DESCRIPTION (FIG. NO.) |
|----------------------|-----------|------------------------|
| Back Cover Ass'y | 133069 | 11.13~14.26~28.31. |
| Rewind Shaft Ass'y | 133036 | 4.6~7. |
| | | |
| | | |

NOTE: (Parts with marked "★" are not available.)

№ 4

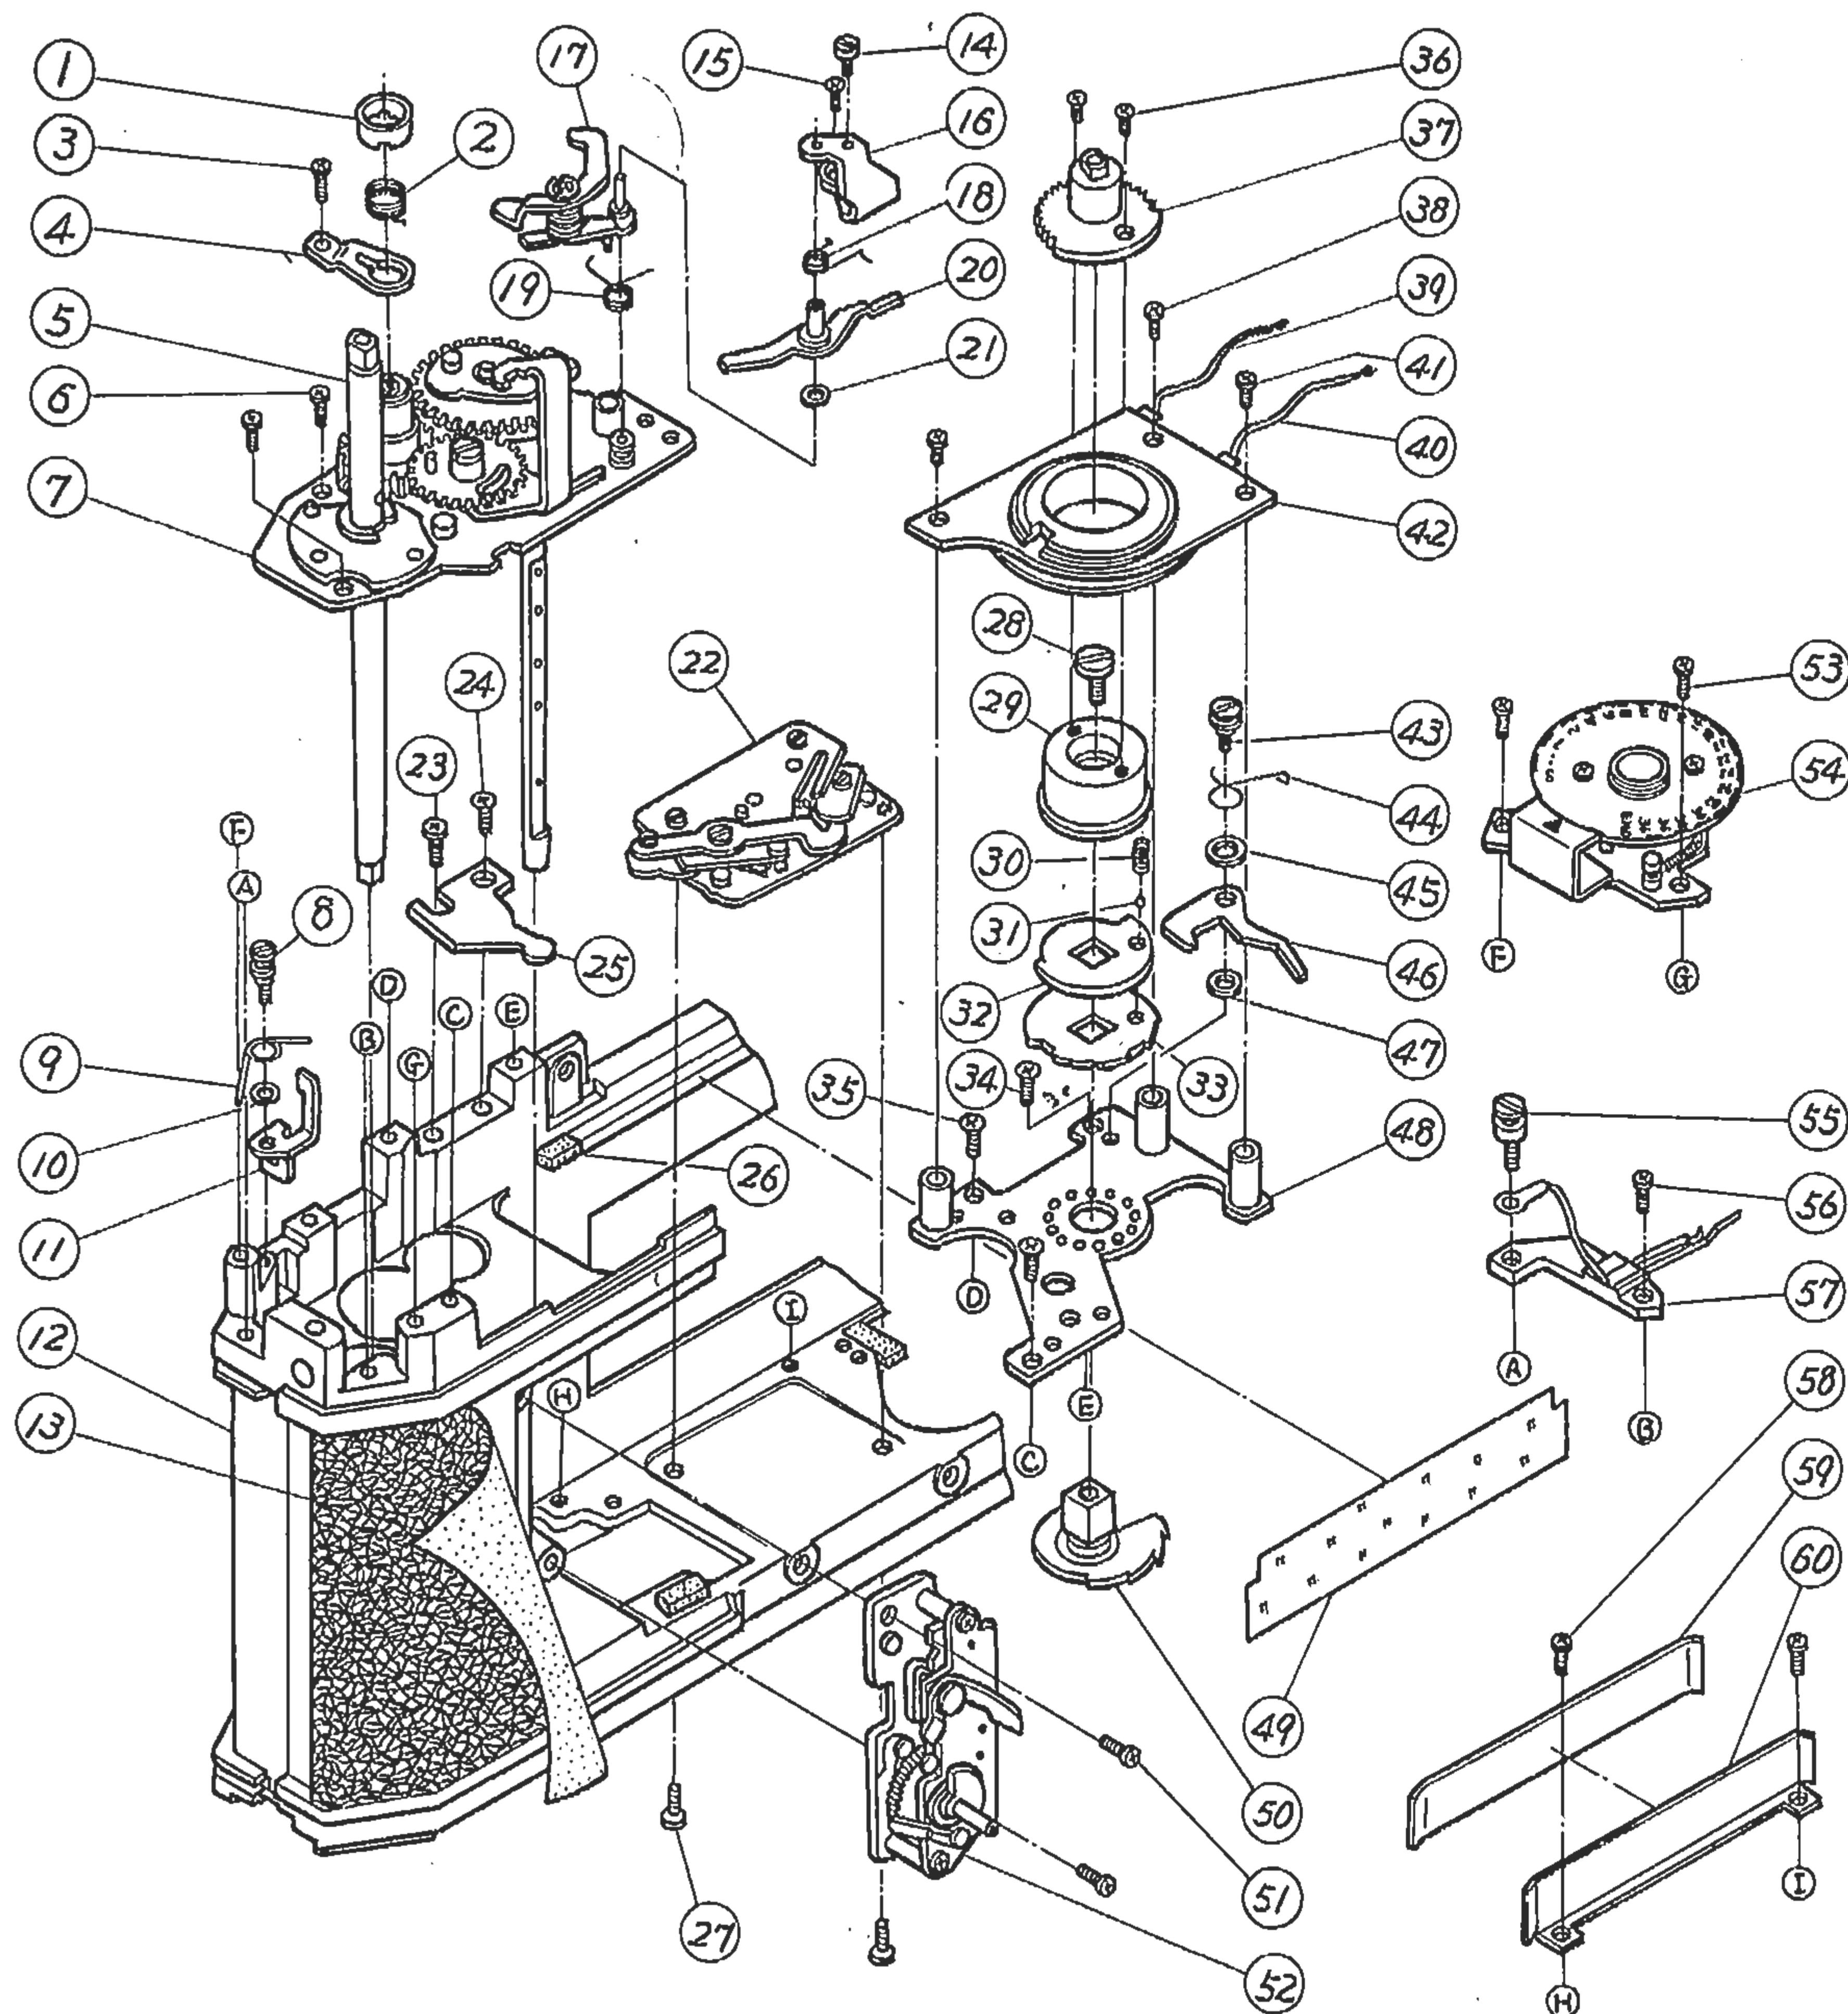


| | PARTS NO | DESCRIPTION | QTY |
|----|----------|-----------------------------------|-----|
| 41 | 61912524 | Setting Screw | 2 |
| 42 | 133502 | Shutter Connecting Resistor | 1 |
| 43 | 121326 | Connecting Rod Setting Lever S.S. | 1 |
| 44 | 121333 | Setting Lever Pressure Spring | 1 |
| 45 | 60722610 | Adjusting Washer | 1 |
| | 60752610 | Adjusting Washer | 1 |
| 46 | 104202 | Connecting Rod Setting Lever | 1 |
| 47 | 60321810 | Adjusting Washer | 1 |
| 48 | ★ | Shutter Cam Base Sub Ass'y | 1 |
| 49 | 128387 | Shutter Light-proof Curtain | 1 |
| 50 | ★ | High-speed Set Cam | 1 |
| 51 | 63914024 | Setting Screw | 2 |
| 52 | 121038 | Self-timer | 1 |
| 53 | ★ | Counter Base Ass'y | 1 |
| 54 | 63913024 | Setting Screw | 2 |
| 55 | 121433 | Synchro Base Plate S.S. | 1 |
| 56 | 63914024 | Setting Screw | 1 |
| 57 | 133022 | Synchro Contact Base Ass'y | 1 |
| 58 | 61912024 | Setting Screw | 2 |
| 59 | ★ | Light-proof Paper | 1 |
| 60 | ★ | Light-proof Plate | 1 |
| | | | |
| | | | |
| | | | |
| | | | |

| | PARTS NO | DESCRIPTION | QTY |
|----|----------|-------------------------------------|-----|
| 1 | 170252 | Anti-rewind Collar | 1 |
| 2 | 128653 | Winding Kick Spring A | 1 |
| 3 | 63913024 | Setting Screw | 1 |
| 4 | 128652 | Anti-rewind Base Plate | 1 |
| 5 | 121017 | Winding Shaft Ass'y | 1 |
| 6 | 63924024 | Setting Screw | 2 |
| 7 | ★ | SW Base Plate Ass'y | 1 |
| 8 | 121865 | Returning Lever Shaft | 1 |
| 9 | 121877 | Returning Lever Spring | 1 |
| 10 | 128666 | Regulating Lever Washer (1) | 調 |
| | 128667 | Regulating Lever Washer (2) | 調 |
| 11 | 104803 | Returning Lever | 1 |
| 12 | ★ | Body | 1 |
| 13 | 133191 | Front Leather (B) | 1 |
| 14 | 121434 | Winding Stud | 1 |
| 15 | 61812524 | Setting Screw | 1 |
| 16 | ★ | Fixing Shaft Supporter | 1 |
| 17 | 133042 | Lower Gear Fixing Hook Ass'y | 1 |
| 18 | 121331 | Upper Gear Fixing Spring | 1 |
| 19 | 121330 | Fixing Hook Spring | 1 |
| 20 | 133010 | Upper Gear Fixing Hook Ass'y | 1 |
| 21 | 60111310 | Adjusting Washer | 1 |
| 22 | 133047 | Governor Ass'y | 1 |
| 23 | 63924024 | Setting Screw | 1 |
| 24 | 61824024 | Setting Screw | 1 |
| 25 | 133216 | Rotary Control Disc (B) | 選 |
| | 133211 | Rotary Control Disc (B) | 選 |
| 26 | 170270 | SW Base Plate Light-proof Mollonren | 1 |
| 27 | 61912524 | Setting Screw | 2 |
| 28 | ★ | Shutter Dial S.S. | 1 |
| 29 | ★ | Shutter Connecting Base | 1 |
| 30 | 121334 | Ball Setting Spring | 1 |
| 31 | 66702020 | Steel Ball | 1 |
| 32 | ★ | Slow Speed Change Cam | 1 |
| 33 | ★ | Slow Speed Set Cam | 1 |
| 34 | 63813522 | Setting Screw | 2 |
| 35 | 61913024 | Setting Screw | 1 |
| 36 | 61813024 | Setting Screw | 2 |
| 37 | ★ | ASA Change Gear | 1 |
| 38 | 63903024 | Setting Screw | 1 |
| 39 | ★ | Lead Wire A | 1 |
| 40 | ★ | Lead Wire C | 1 |

| OTHER ASSEMBLY PARTS | ORDER NO. | DESCRIPTION (FIG. NO.) |
|----------------------|-----------|------------------------|
| SW Base Plate Ass'y | 133015 | 7.14 21. |
| Shutter Cam Base(A) | 133045 | 28 48, 50. |
| Light-proof Plate(A) | 121035 | 59. 60. |
| | | |
| | | |

NOTE: (Parts with marked "★" are not available.)

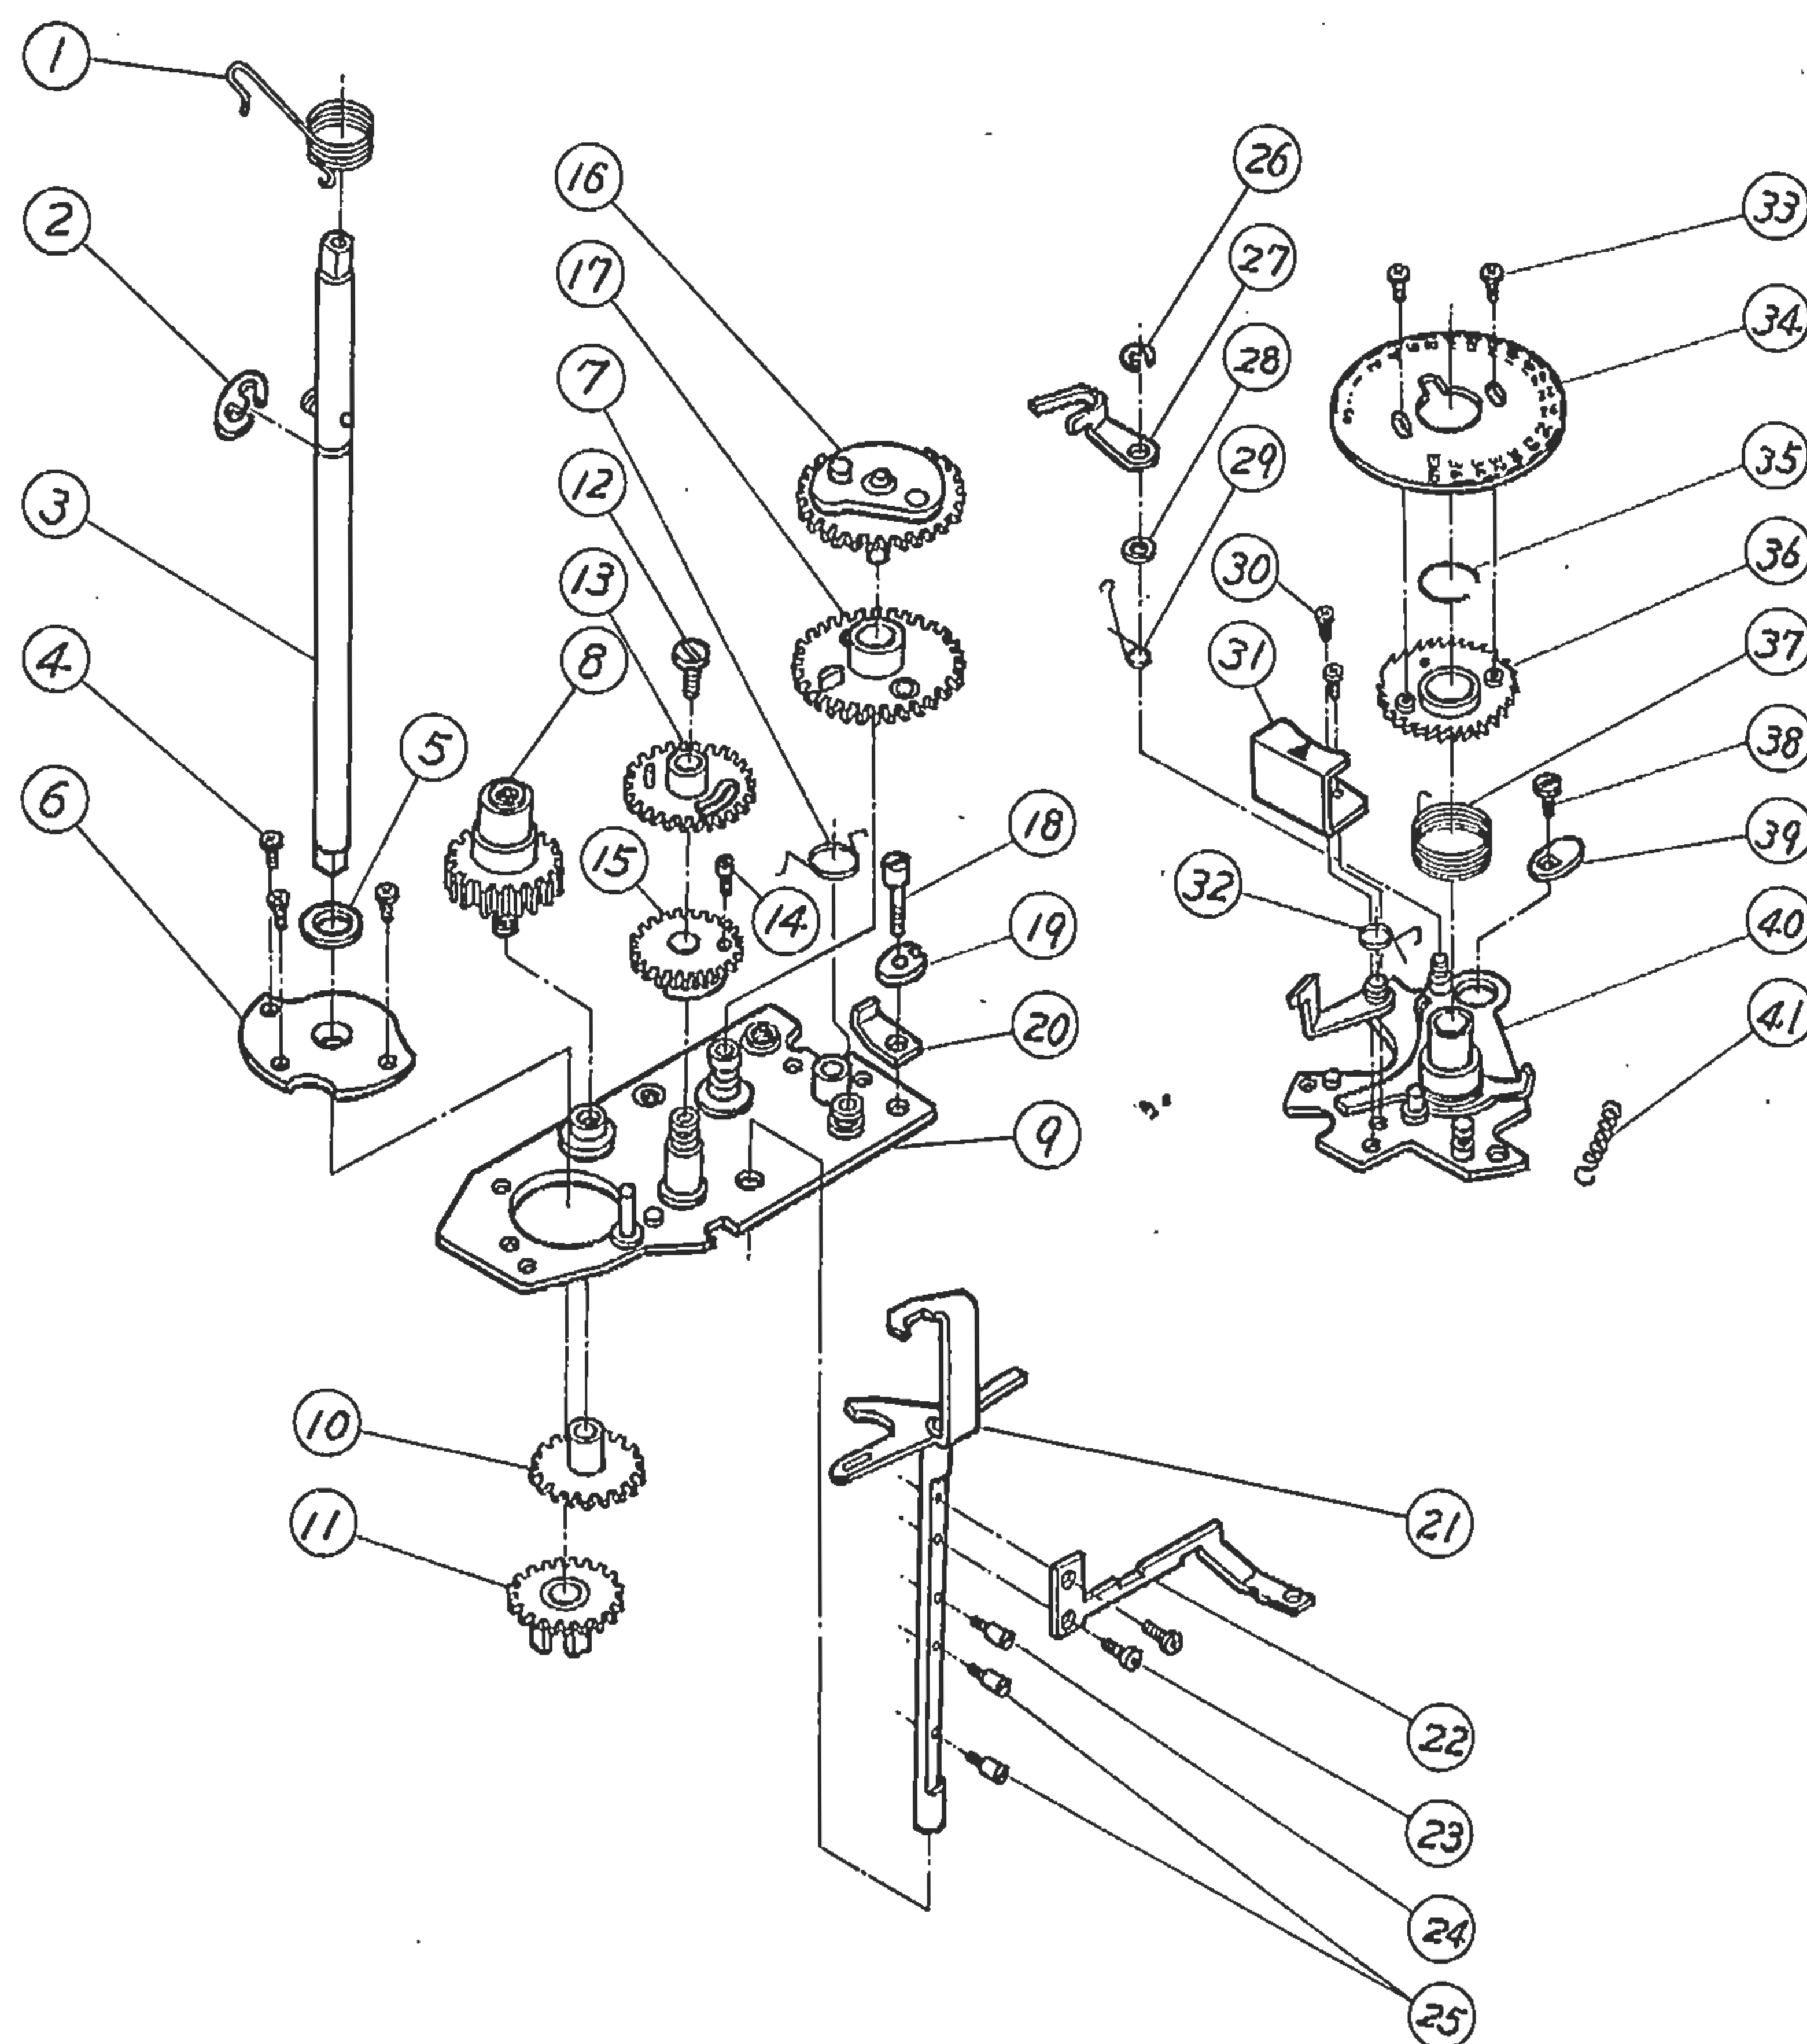


| OTHER ASSEMBLY PARTS | ORDER NO. | DESCRIPTION (FIG. NO.) |
|----------------------------|-----------|------------------------|
| SW Base Plate Ass'y | 133015 | 6, 8~10, 13~15, 21. |
| F Counter Base Plate Ass'y | 133025 | 26~32, 35~41. |

| PARTS NO | DESCRIPTION | QTY |
|----------|-------------|------------------------|
| 41 | 121876 | F Counter Lever Spring |


| PARTS NO | DESCRIPTION | QTY |
|----------|-------------|---|
| 1 | 121605 | Winding Spring |
| 2 | 121658 | Winding Shaft Washer |
| 3 | 121017 | Winding Shaft Ass'y |
| 4 | 61912224 | Setting Screw |
| 5 | 60254110 | Adjusting Washer |
| | 60214110 | Adjusting Washer |
| | 60224110 | Adjusting Washer |
| 6 | 128602 | Winding Shaft Metal |
| 7 | 121316 | Governor Change Shaft Holder Spring |
| 8 | 170251 | Idle Gear (Upper) |
| 9 | 133014 | Switch Base Plate Sub Ass'y |
| 10 | 170250 | Idle Gear (Lower) |
| 11 | 121188 | Spool Gear |
| 12 | 121429 | Clutch Shaft S.S. |
| 13 | 128009 | Clutch Upper Gear Ass'y |
| 14 | 121434 | Winding Stud |
| | 121435 | Winding Stud |
| | 121436 | Winding Stud |
| 15 | 170402 | Clutch Lower Gear |
| 16 | 133013 | Upper Gear Ass'y |
| 17 | 133012 | Lower Gear Ass'y |
| 18 | 133238 | Fixing Hook Stopper |
| 19 | 133239 | Sickle Shaped Base Adjusting Collar |
| 20 | 170130 | Upper Gear Fixing Hook Regulating Plate |
| 21 | 133091 | Shifter Shaft |
| 22 | 133414 | Shifter Lever |
| 23 | 63903024 | Setting Screw |
| 24 | 121432 | Shift Shaft Pin |
| 25 | 121431 | Shift Shaft Pin |
| 26 | 121869 | Shift Shaft Snap Ring |
| 27 | 170501 | Transport Claw |
| 28 | 60112110 | Adjusting Washer |
| | 60122110 | Adjusting Washer |
| 29 | 121874 | Transport Claw Spring |
| 30 | 61901424 | Setting Screw |
| 31 | 104802 | F Counter Indicator |
| 32 | 121875 | Stopper Claw Spring |
| 33 | 63901824 | Setting Screw |
| 34 | 104801 | F Counter Dial |
| 35 | 121878 | Counter Stopper Ring |
| 36 | ★ | F Counter Gear |
| 37 | 121873 | F Counter Returning Spring |
| 38 | 121866 | F Counter Cam S.S. |
| 39 | 170510 | F Counter Cam |
| 40 | ★ | F Counter Base Plate Sub Ass'y |

NOTE: (Parts with marked "★" are not available.)

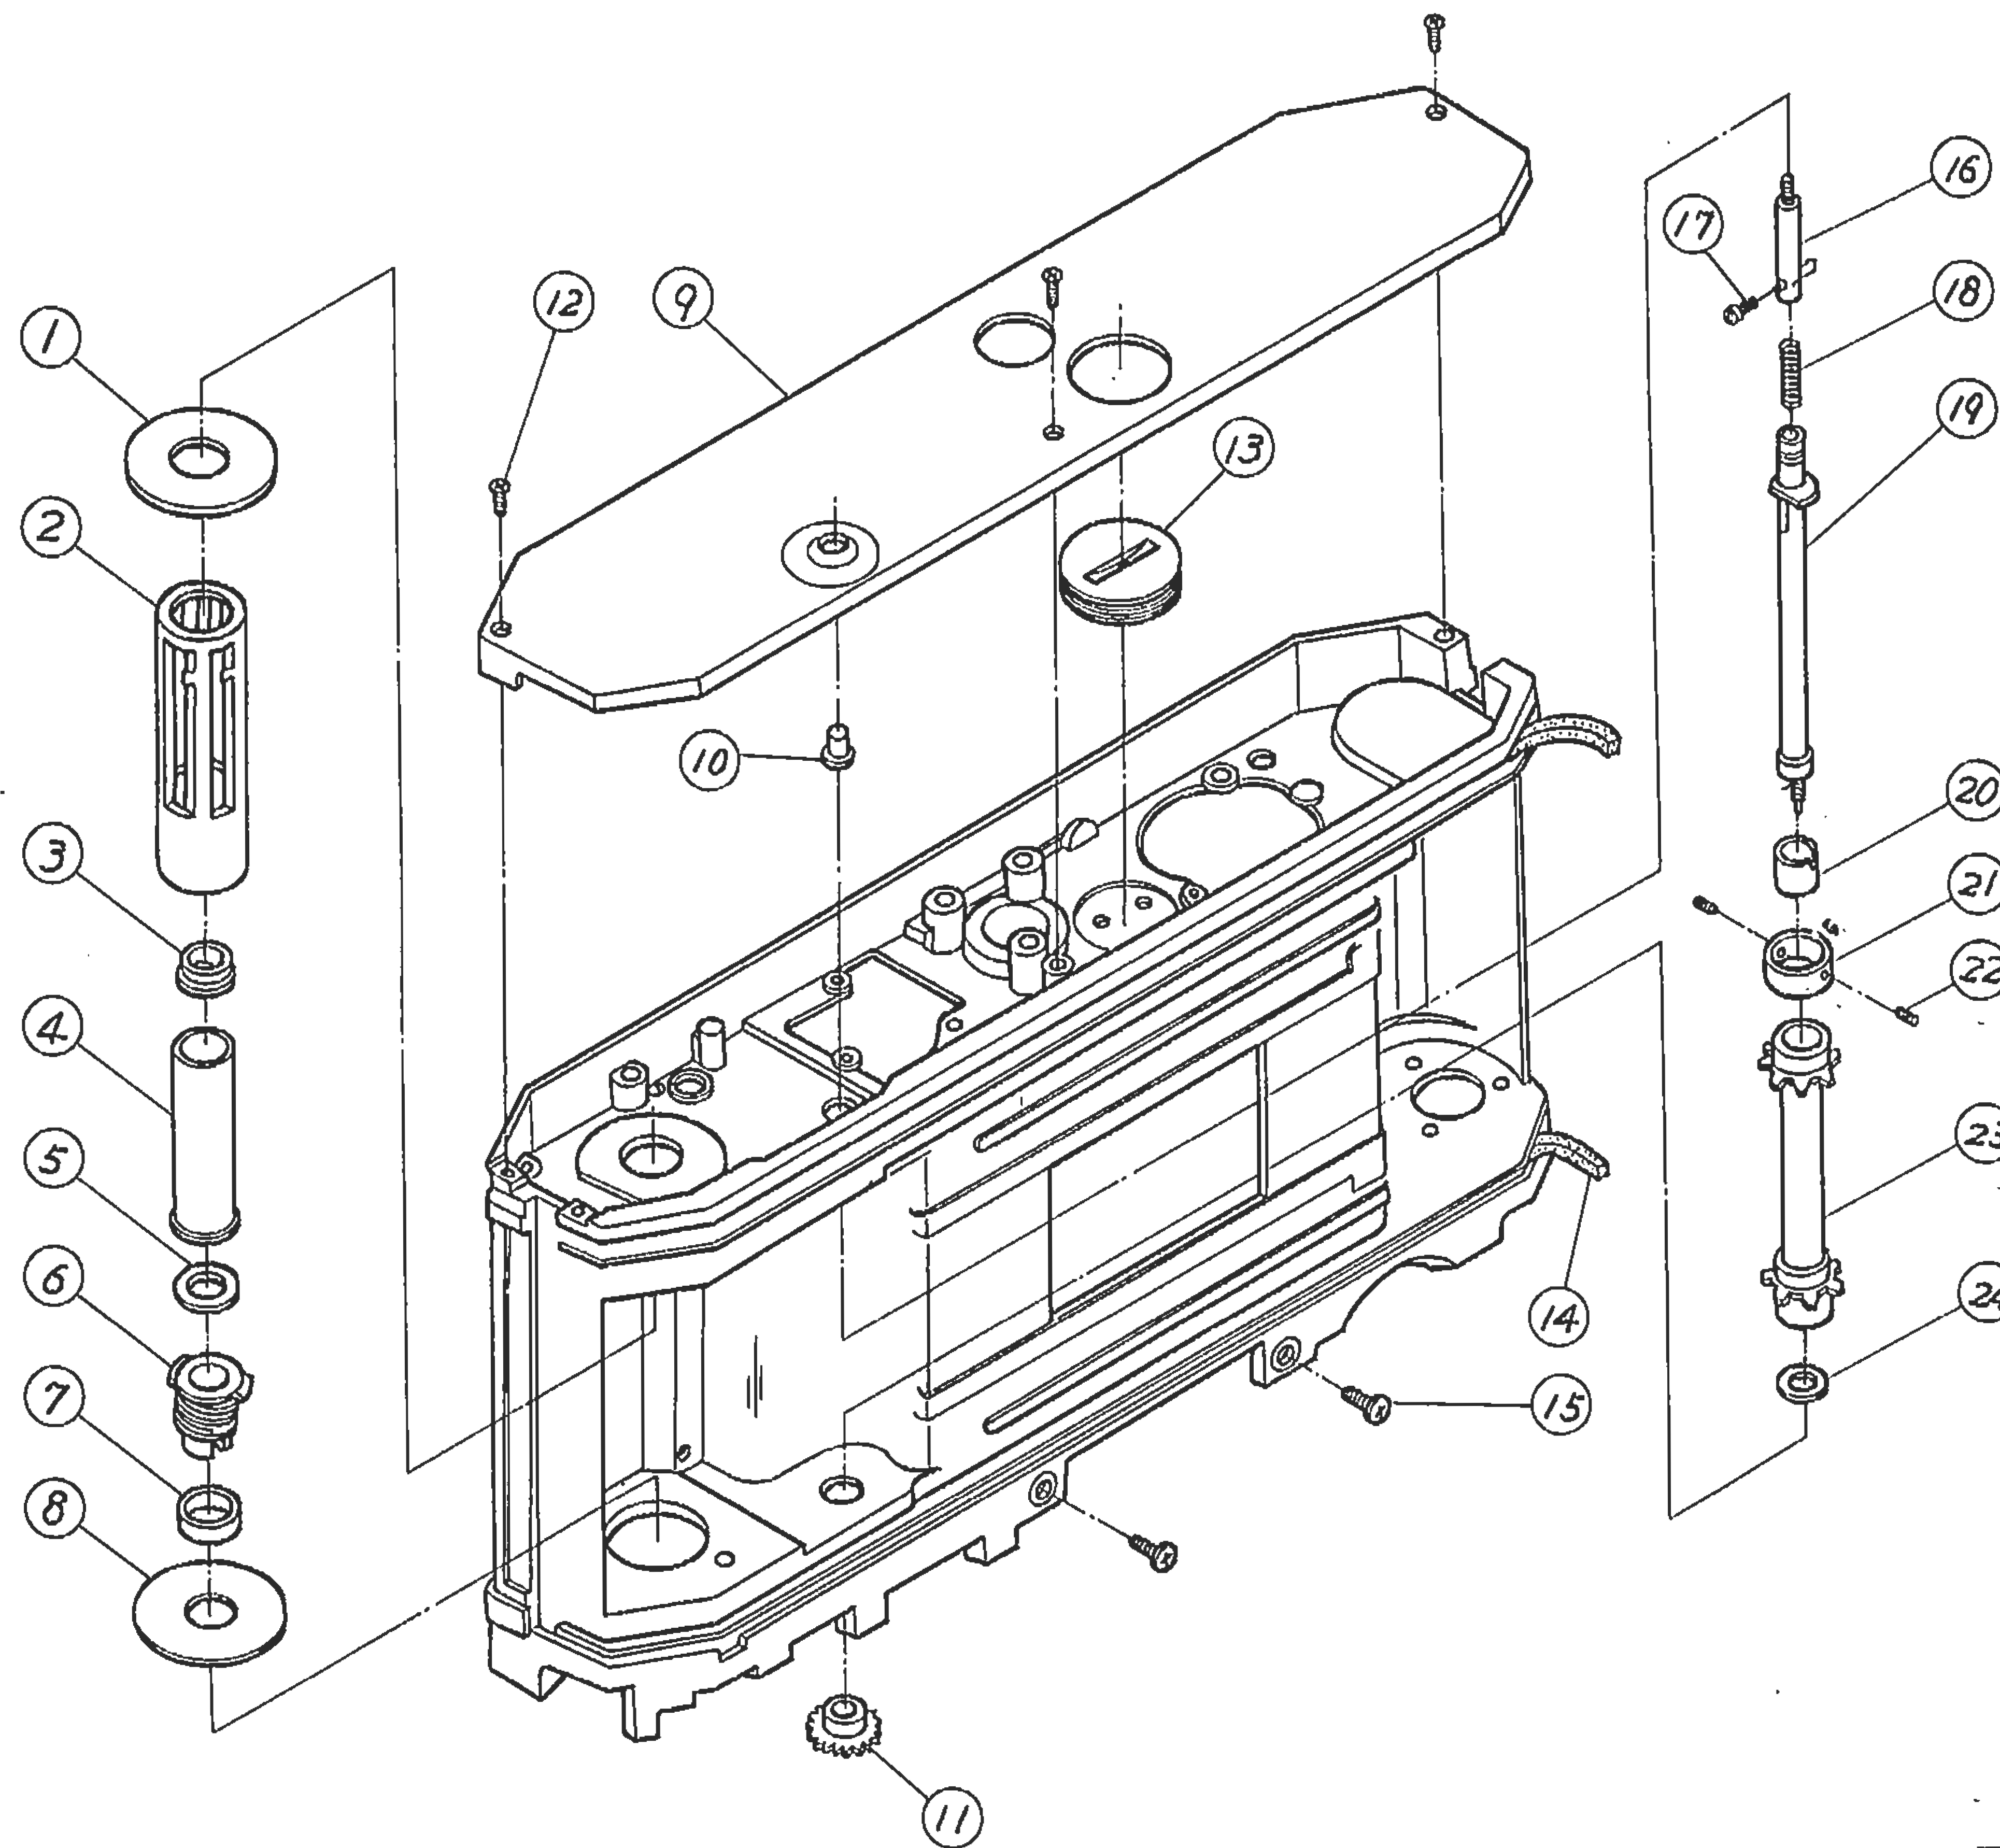


| | PARTS NO | DESCRIPTION | QTY |
|----|----------|---------------------------|-----|
| 1 | 121186 | Spool Collar | 1 |
| 2 | 316668 | Outside Spool | 1 |
| 3 | 121185 | Spool Holder | 1 |
| 4 | 305658 | Inside Spool | 1 |
| 5 | 121189 | Inside Spool Bushing | 1 |
| 6 | 029601 | Friction Shaft Ass'y | 1 |
| 7 | 305664 | "F" Gear Collar | 1 |
| 8 | 170216 | Spool Washer | 1 |
| 9 | 133120 | Bottom Cover | 1 |
| 10 | 170248 | Rewind Button | 1 |
| 11 | 128645 | Sprocket Gear (Upper) | 1 |
| 12 | 61813028 | Setting Screw | 3 |
| 13 | 170080 | Battery Cap | 1 |
| 14 | 132139 | Body Moquette | 2 |
| 15 | 61925024 | Setting Screw | 2 |
| 16 | 170240 | Rewind Button Shaft | 1 |
| 17 | 121656 | Rewind Button S.S. | 1 |
| 18 | 121657 | Rewind Button Spring | 1 |
| 19 | 170241 | Sprocket Shaft | 1 |
| 20 | 170244 | Clutch | 1 |
| 21 | 170271 | Sprocket Collar | 1 |
| 22 | 121655 | Clutch S.S. | 2 |
| 23 | 170243 | Sprocket | 1 |
| 24 | 170242 | Sprocket Adjusting Washer | 1 |
| | 128630 | Sprocket Adjusting Washer | 2 |

| OTHER ASSEMBLY PARTS | ORDER NO. | DESCRIPTION (FIG. NO.) |
|----------------------|-----------|------------------------|
| Sprocket Ass'y. | 121002 | 16~23. |
| | | |
| | | |

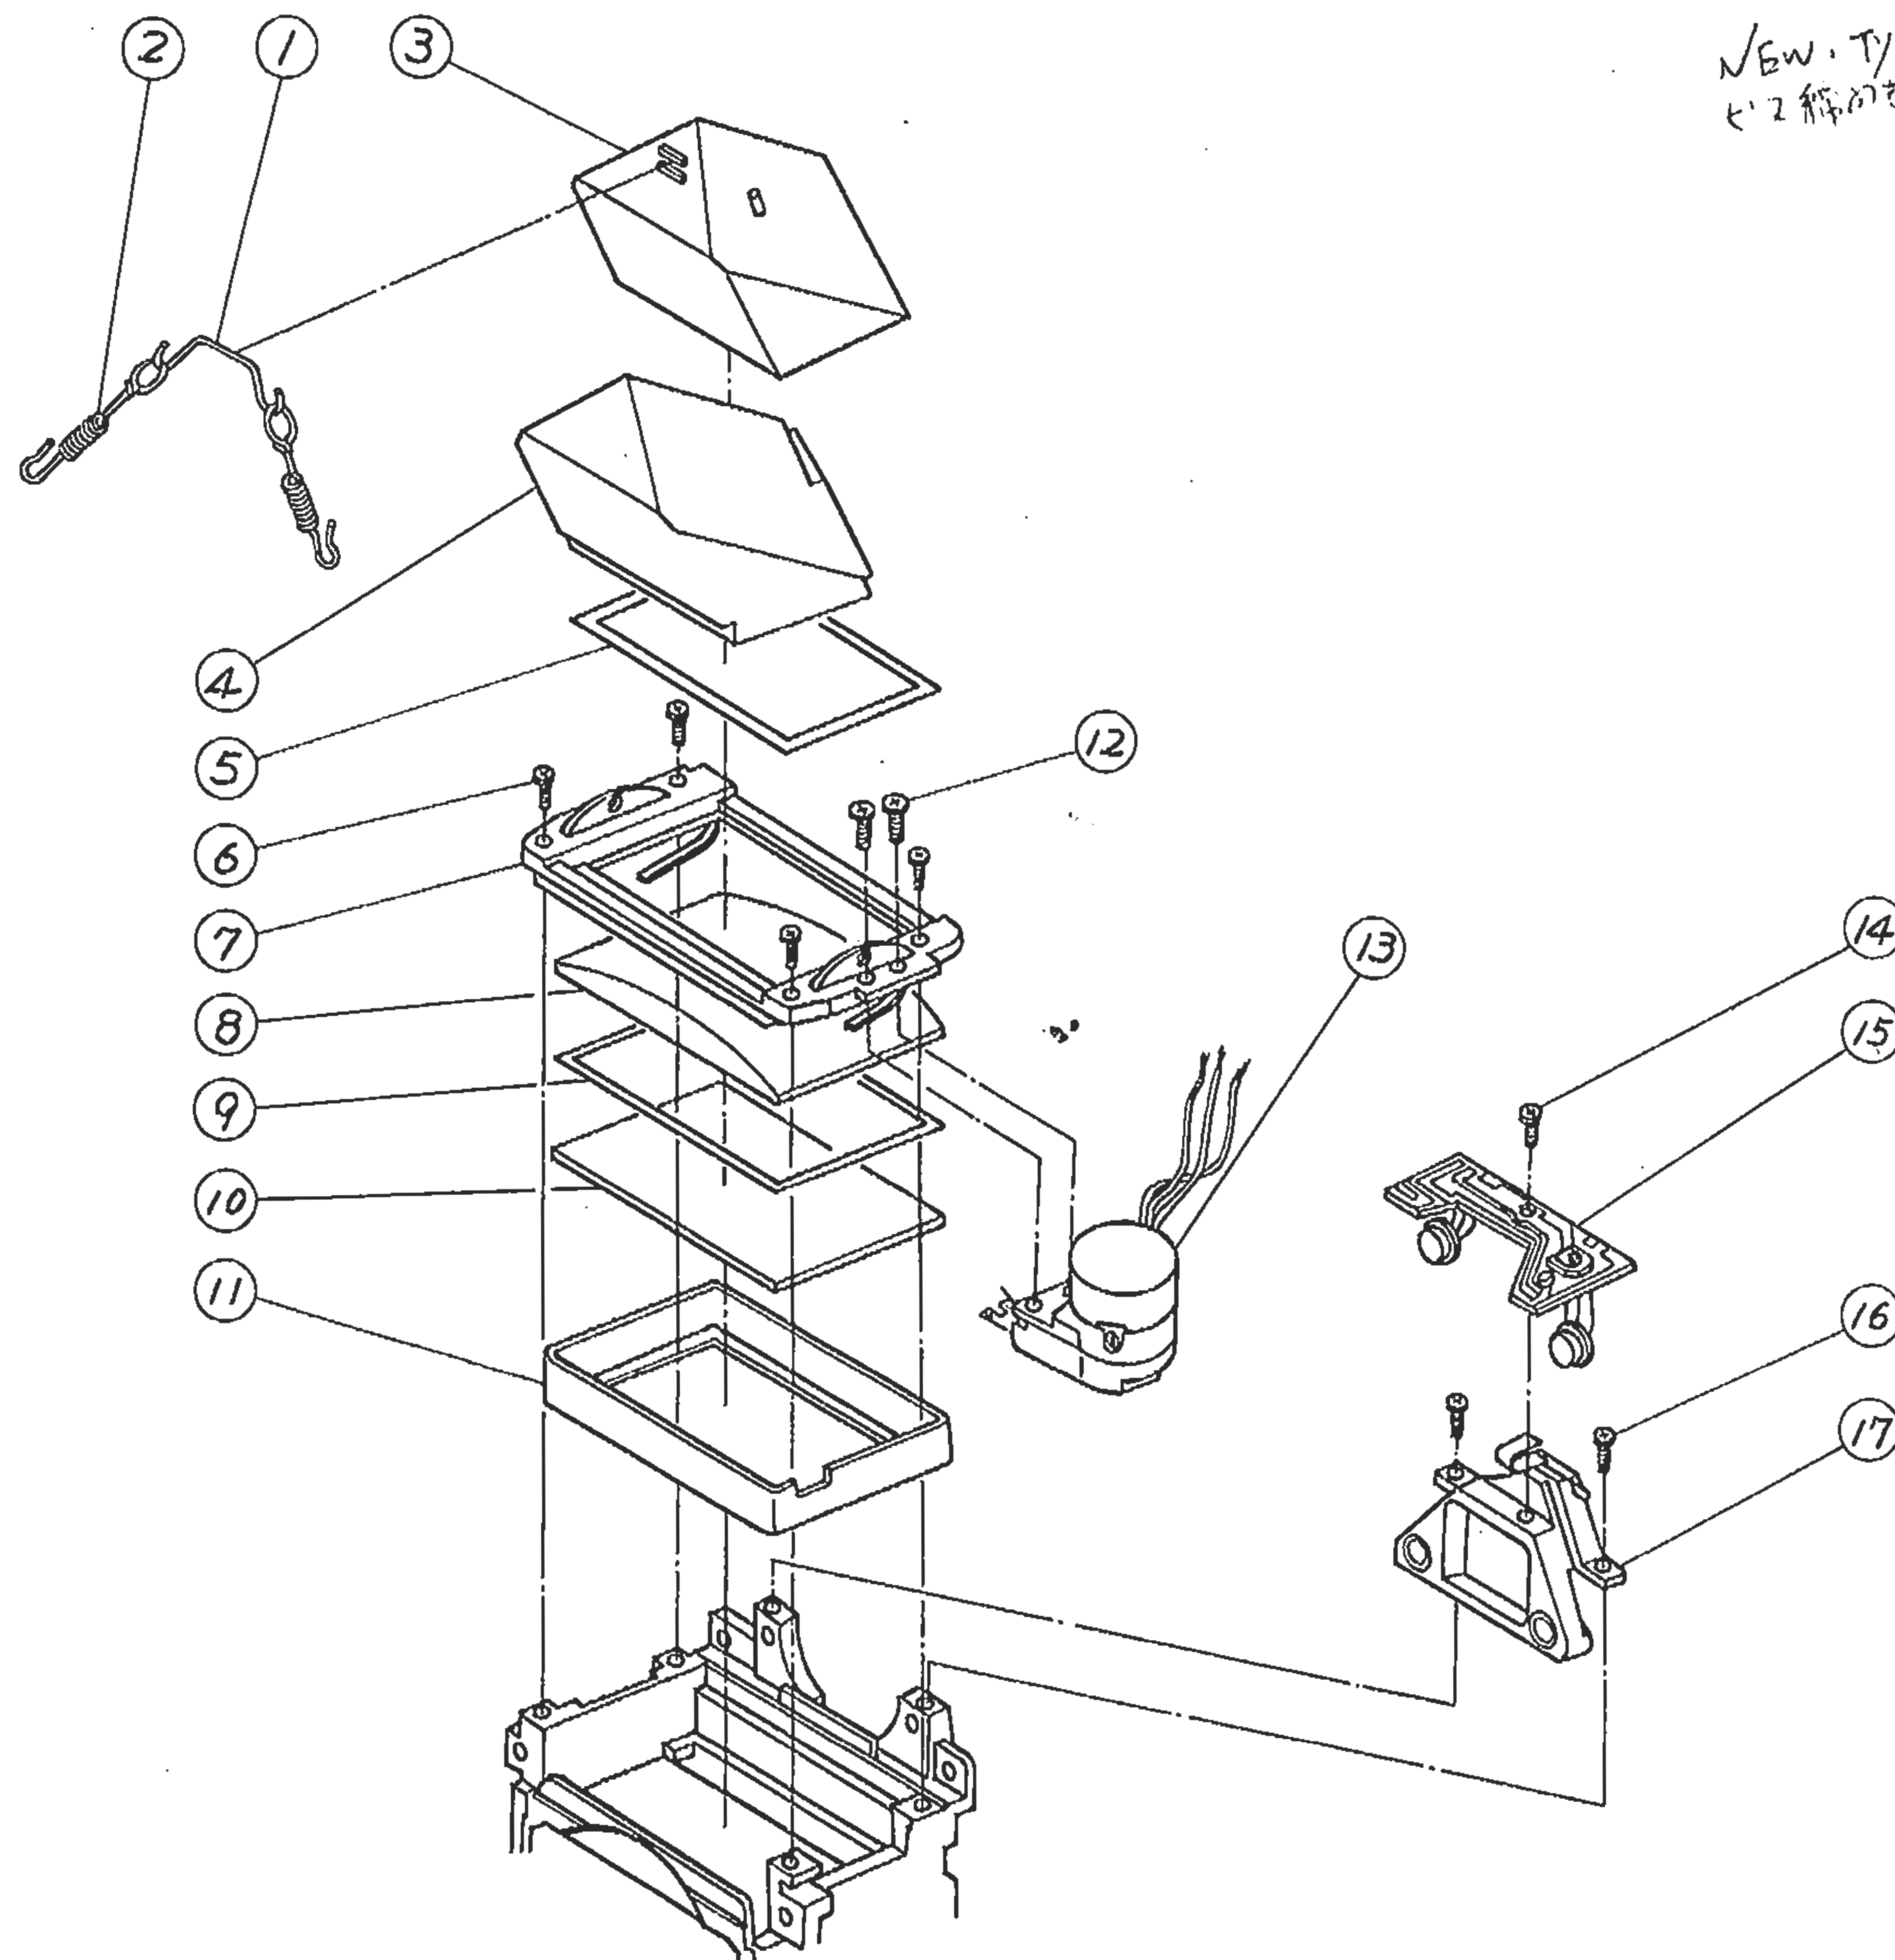

| | PARTS NO | DESCRIPTION | QTY |
|----|----------|----------------------------|-----|
| 1 | 121791 | Penta Pressure Spring Post | 1 |
| 2 | 104758 | Penta Pressure Spring | 2 |
| 3 | 170863 | Penta Prism Roof Cap | 1 |
| 4 | 121811 | Penta Prism | 1 |
| 5 | 133806 | Penta Prism Supporter | 1 |
| 6 | 61914024 | Setting Screw | 4 |
| 7 | 133801 | Penta Prism Holder | 1 |
| 8 | 121812 | Condenser Lens | 1 |
| 9 | 121855 | Condenser Washer | 1 |
| 10 | 121813 | Fresnel Lens | 1 |
| 11 | 128802 | Condenser Lens Holder | 1 |
| 12 | 63913024 | Setting Screw | 2 |
| 13 | 133501 | Indicating Meter | 1 |
| 14 | 61912224 | Setting Screw | 1 |
| 15 | 133081 | CDS Ass'y | 1 |
| 16 | 61914024 | Setting Screw | 2 |
| 17 | 128840 | CDS Holder | 1 |
| | 1338016 | Penta Prism Holder (new) | |
| | | | |
| | | | |


| OTHER ASSEMBLY PARTS | ORDER NO. | DESCRIPTION (FIG. NO.) |
|--------------------------|-----------|------------------------|
| Penta Prism Holder Ass'y | 133071 | 2.5.7. |
| CDS Holder Ass'y | 133082 | 14~17. |
| | | |
| | | |

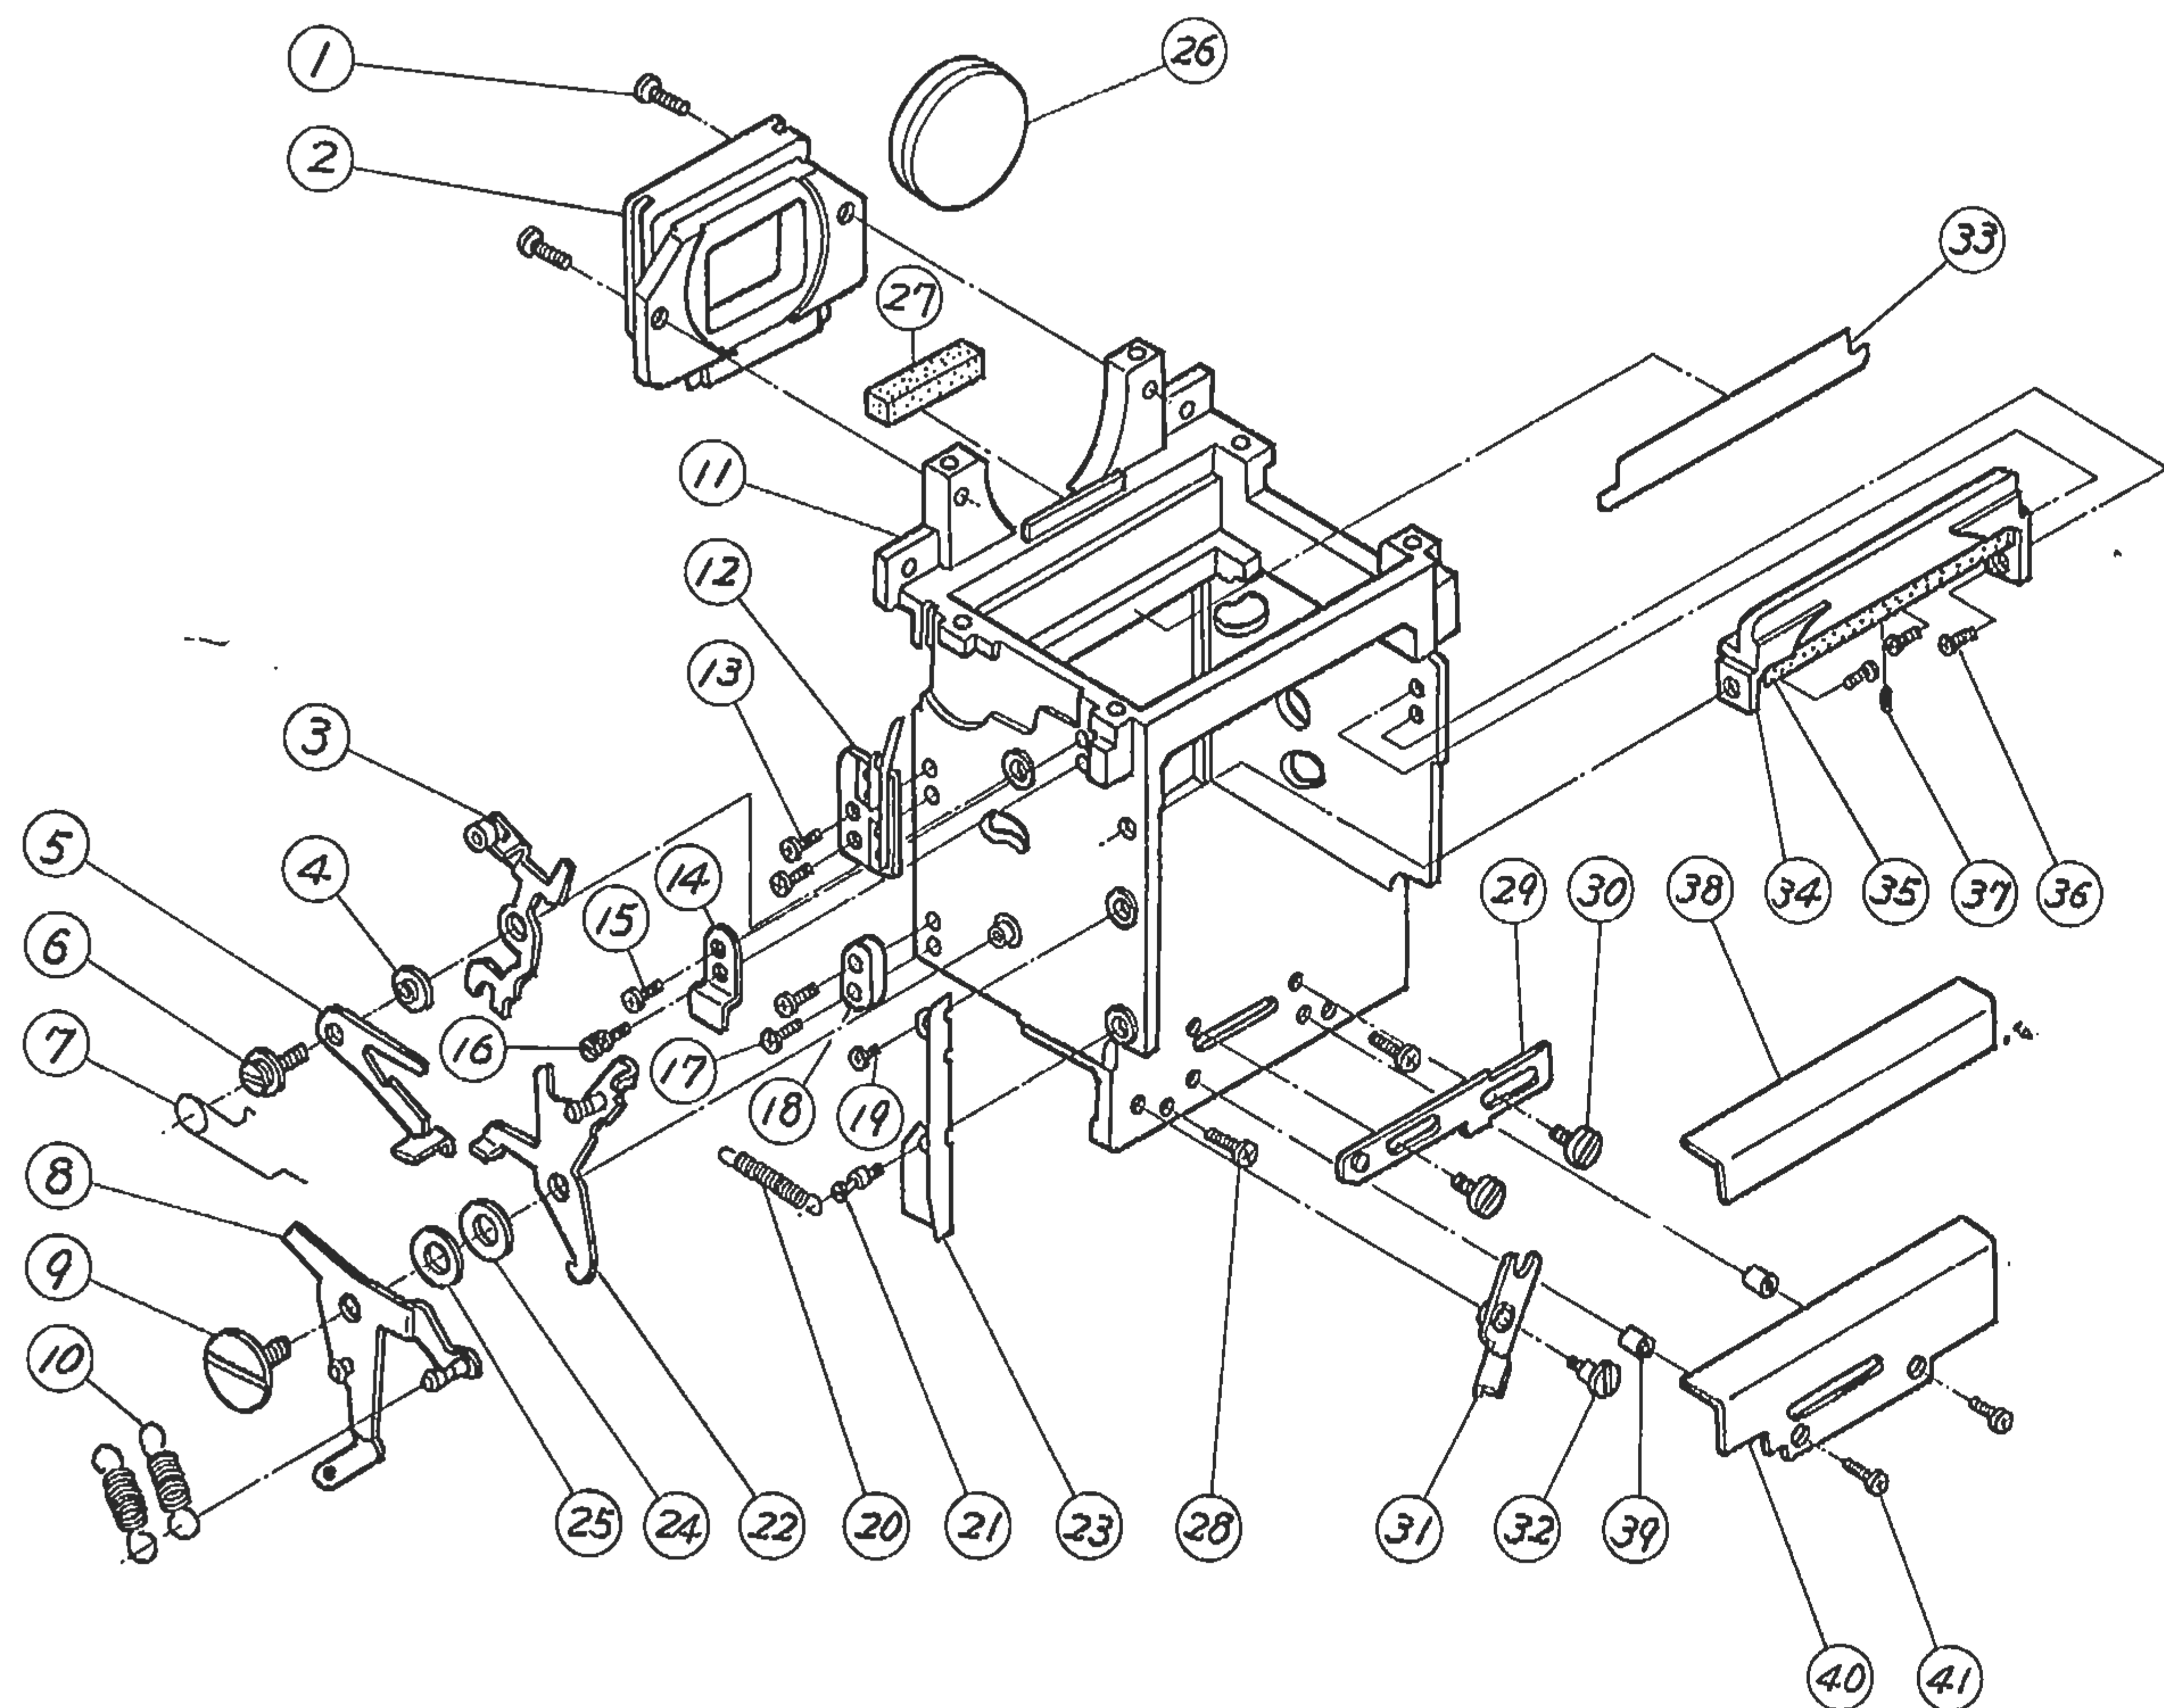

| OTHER ASSEMBLY PARTS | ORDER NO. | DESCRIPTION (FIG. NO.) |
|----------------------|-----------|------------------------|
| Mirror Box Ass'y | 133065 | 1~41. |
| | | |
| | | |

| | PARTS NO | DESCRIPTION | QTY |
|----|----------|---|-----|
| 1 | 61813524 | Setting Screw | 2 |
| 2 | 104765 | Eye-piece Frame | 1 |
| 3 | 133054 | Returning Second Lever Ass'y | 1 |
| 4 | 133715 | Start Lever Shaft | 1 |
| 5 | 133714 | Start Lever | 1 |
| 6 | 133719 | Start Lever S.S. | 1 |
| 7 | 133720 | Start Lever Spring | 1 |
| 8 | 133056 | Mirror Set Lever Ass'y | 1 |
| 9 | 104705 | Mirror Setting Lever Shaft | 1 |
| 10 | 133710 | Mirror Operating Spring | 2 |
| 11 | ★ | Mirror Box Sub Ass'y | 1 |
| 12 | 133057 | Synchro Switch Ass'y | 1 |
| 13 | 61912524 | Setting Screw | 2 |
| 14 | 133721 | Start Lever Fixing Plate | 1 |
| 15 | 61912524 | Setting Screw | 1 |
| 16 | 133722 | Start Lever Spring Post | 1 |
| 17 | 61913524 | Setting Screw | 2 |
| 18 | 128711 | Set Lever Stopper | 1 |
| 19 | 61911824 | Setting Screw | 1 |
| 20 | 133712 | Set Lever Restore Spring | 1 |
| 21 | 121825 | Mirror Regulating Lever Shaft Holder | 1 |
| 22 | 133055 | Mirror Operating Lever Ass'y | 1 |
| 23 | 133723 | Mirror Box Side Cover (B) | 1 |
| 24 | 60223310 | Adjusting Washer | 1 |
| 25 | 60213310 | Adjusting Washer | 調 |
| | 60723310 | Adjusting Washer | 調 |
| | 60753310 | Adjusting Washer | 調 |
| 26 | 12181493 | Eye-piece Lens Ass'y | 1 |
| 27 | 170894 | Eye-piece Lens Light-Proof Moquette | 1 |
| 28 | 61923024 | Setting Screw | 2 |
| 29 | 128059 | Diaphragm Lever Ass'y | 1 |
| 30 | 128766 | Diaphragm Lever Shaft | 2 |
| 31 | 128060 | Diaphragm Connecting Lever Ass'y | 1 |
| 32 | 128770 | Diaphragm Connecting Lever Shaft | 1 |
| 33 | 128760 | Mirror Plate Light-proof Curtain | 1 |
| 34 | 128049 | Condenser Frame Fixing Ass'y | 1 |
| 35 | 128777 | Mirror Cushion | 1 |
| 36 | 61912524 | Setting Screw | 3 |
| 37 | 121821 | Focus Adjusting S.S. (A) | 1 |
| 38 | 128776 | Inside Light-proof Paper (D) | 1 |
| 39 | 128772 | Mirror Box Front Cover Collar | 2 |
| 40 | 128771 | Mirror Box Front Cover | 1 |
| 41 | 61914024 | M Box Front Cover Screw | 2 |


NOTE: (Parts with marked "★" are not available.)

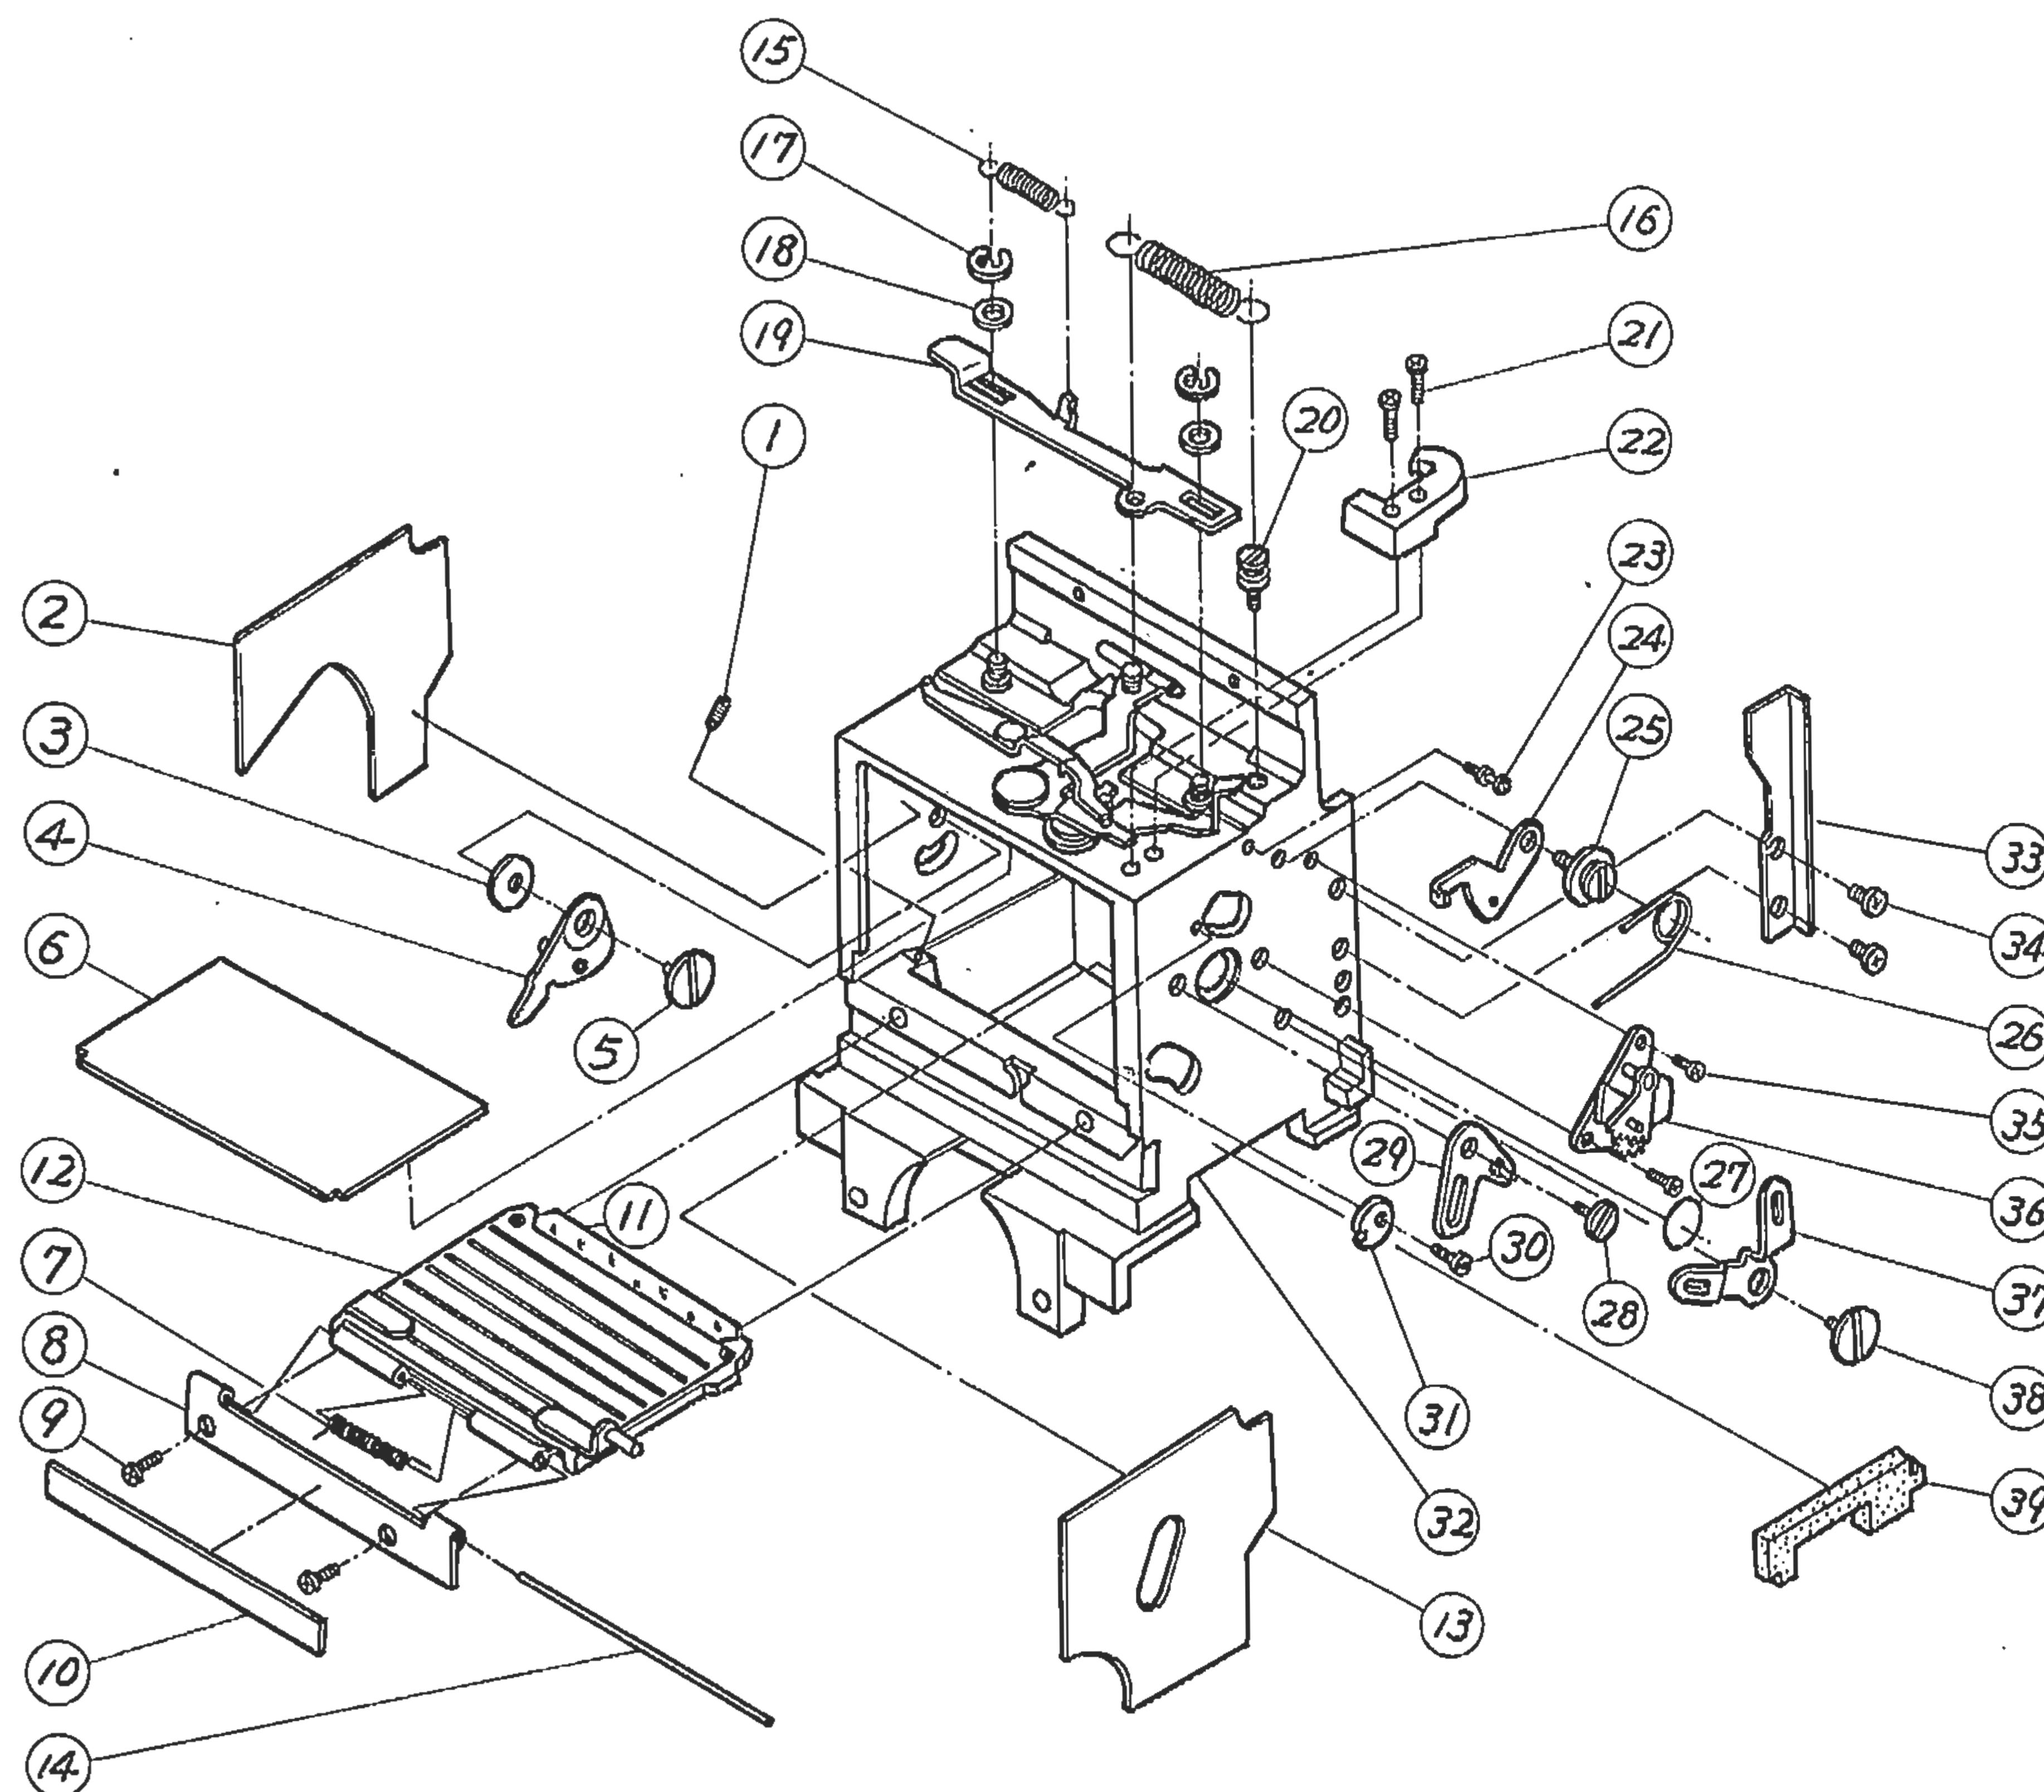

| | PARTS NO | DESCRIPTION | QTY |
|----|----------|--|-----|
| 1 | 121822 | Focus Adjusting S.S. (B) | 2 |
| 2 | 128775 | Inside Light-proof Paper (C) | 1 |
| 3 | 121753 | Winding Lever Adjusting Washer | 1 |
| 4 | 104029 | Mirror Activating NO. 1 Lever Ass'y | 1 |
| 5 | 121820 | Mirror Activating NO. 1 Lever Shaft | 1 |
| 6 | 128773 | Inside Light-proof Paper (A) | 1 |
| 7 | ★ | Mirror Restore Spring | 1 |
| 8 | ★ | Mirror Plate Hinge | 1 |
| 9 | 61914024 | Setting Screw | 2 |
| 10 | 170867 | Mirror Box Light-proof Paper | 1 |
| 11 | ★ | R.F. Mirror <i>TE. IT order</i> | 1 |
| 12 | ★ | Mirror Plate Sub Ass'y | 1 |
| 13 | 128774 | Inside Light-proof Paper (B) | 1 |
| 14 | ★ | Mirror Plate Hinge Shaft | 1 |
| 15 | 128754 | Restore Lever Returing Spring | 1 |
| 16 | 133733 | Aperture Lever Spring | 1 |
| 17 | 66101525 | Snap Ring (E-15) | 2 |
| 18 | 60112110 | Adjusting Washer | |
| 19 | 133051 | Restore Lever Ass'y | 1 |
| 20 | 133736 | Aperture Lever Spring Post (B) | 1 |
| 21 | 61915024 | Setting Screw | 2 |
| 22 | 133737 | Aperture Lever Stopper | 1 |
| 23 | 121825 | Mirror Regulating Lever Spring Holder | 1 |
| 24 | 128096 | Mirror Regulating Lever Ass'y | 1 |
| 25 | 121824 | Mirror Regulating Lever Shaft | 1 |
| 26 | 121831 | Mirror Regulating Lever Spring | 1 |
| 27 | 121808 | Tripod Socket Washer | 1 |
| 28 | 128884 | Governor Driving Lever Shaft | 1 |
| 29 | 128023 | Governor Driving Lever A Ass'y | 1 |
| 30 | 61112510 | Setting Screw | 1 |
| 31 | 170841 | Mirror Regulating Lever Stopper | 1 |
| 32 | ★ | Mirror Box Sub Ass'y | 1 |
| 33 | 128815 | Mirror Box Side Plate | 1 |
| 34 | 61911524 | Setting Screw | 2 |
| 35 | 61902224 | Setting Screw | 2 |
| 36 | 131299 | Lug Governor | 1 |
| 37 | 128883 | Governor Driving Lever (B) | 1 |
| 38 | 128884 | Governor Driving Lever Shaft | 1 |
| 39 | 133810 | M.B. Dust-proof Moltopren | 1 |

| OTHER ASSEMBLY PARTS | ORDER NO. | DESCRIPTION (FIG. NO.) |
|----------------------|-----------|------------------------|
| Mirror Box Ass'y | 133065 | 1~39. |
| Mirror Box Plate(A) | 128053 | 7~8. 11~12.14. |

NOTE: (Parts with marked "★" are not available.)

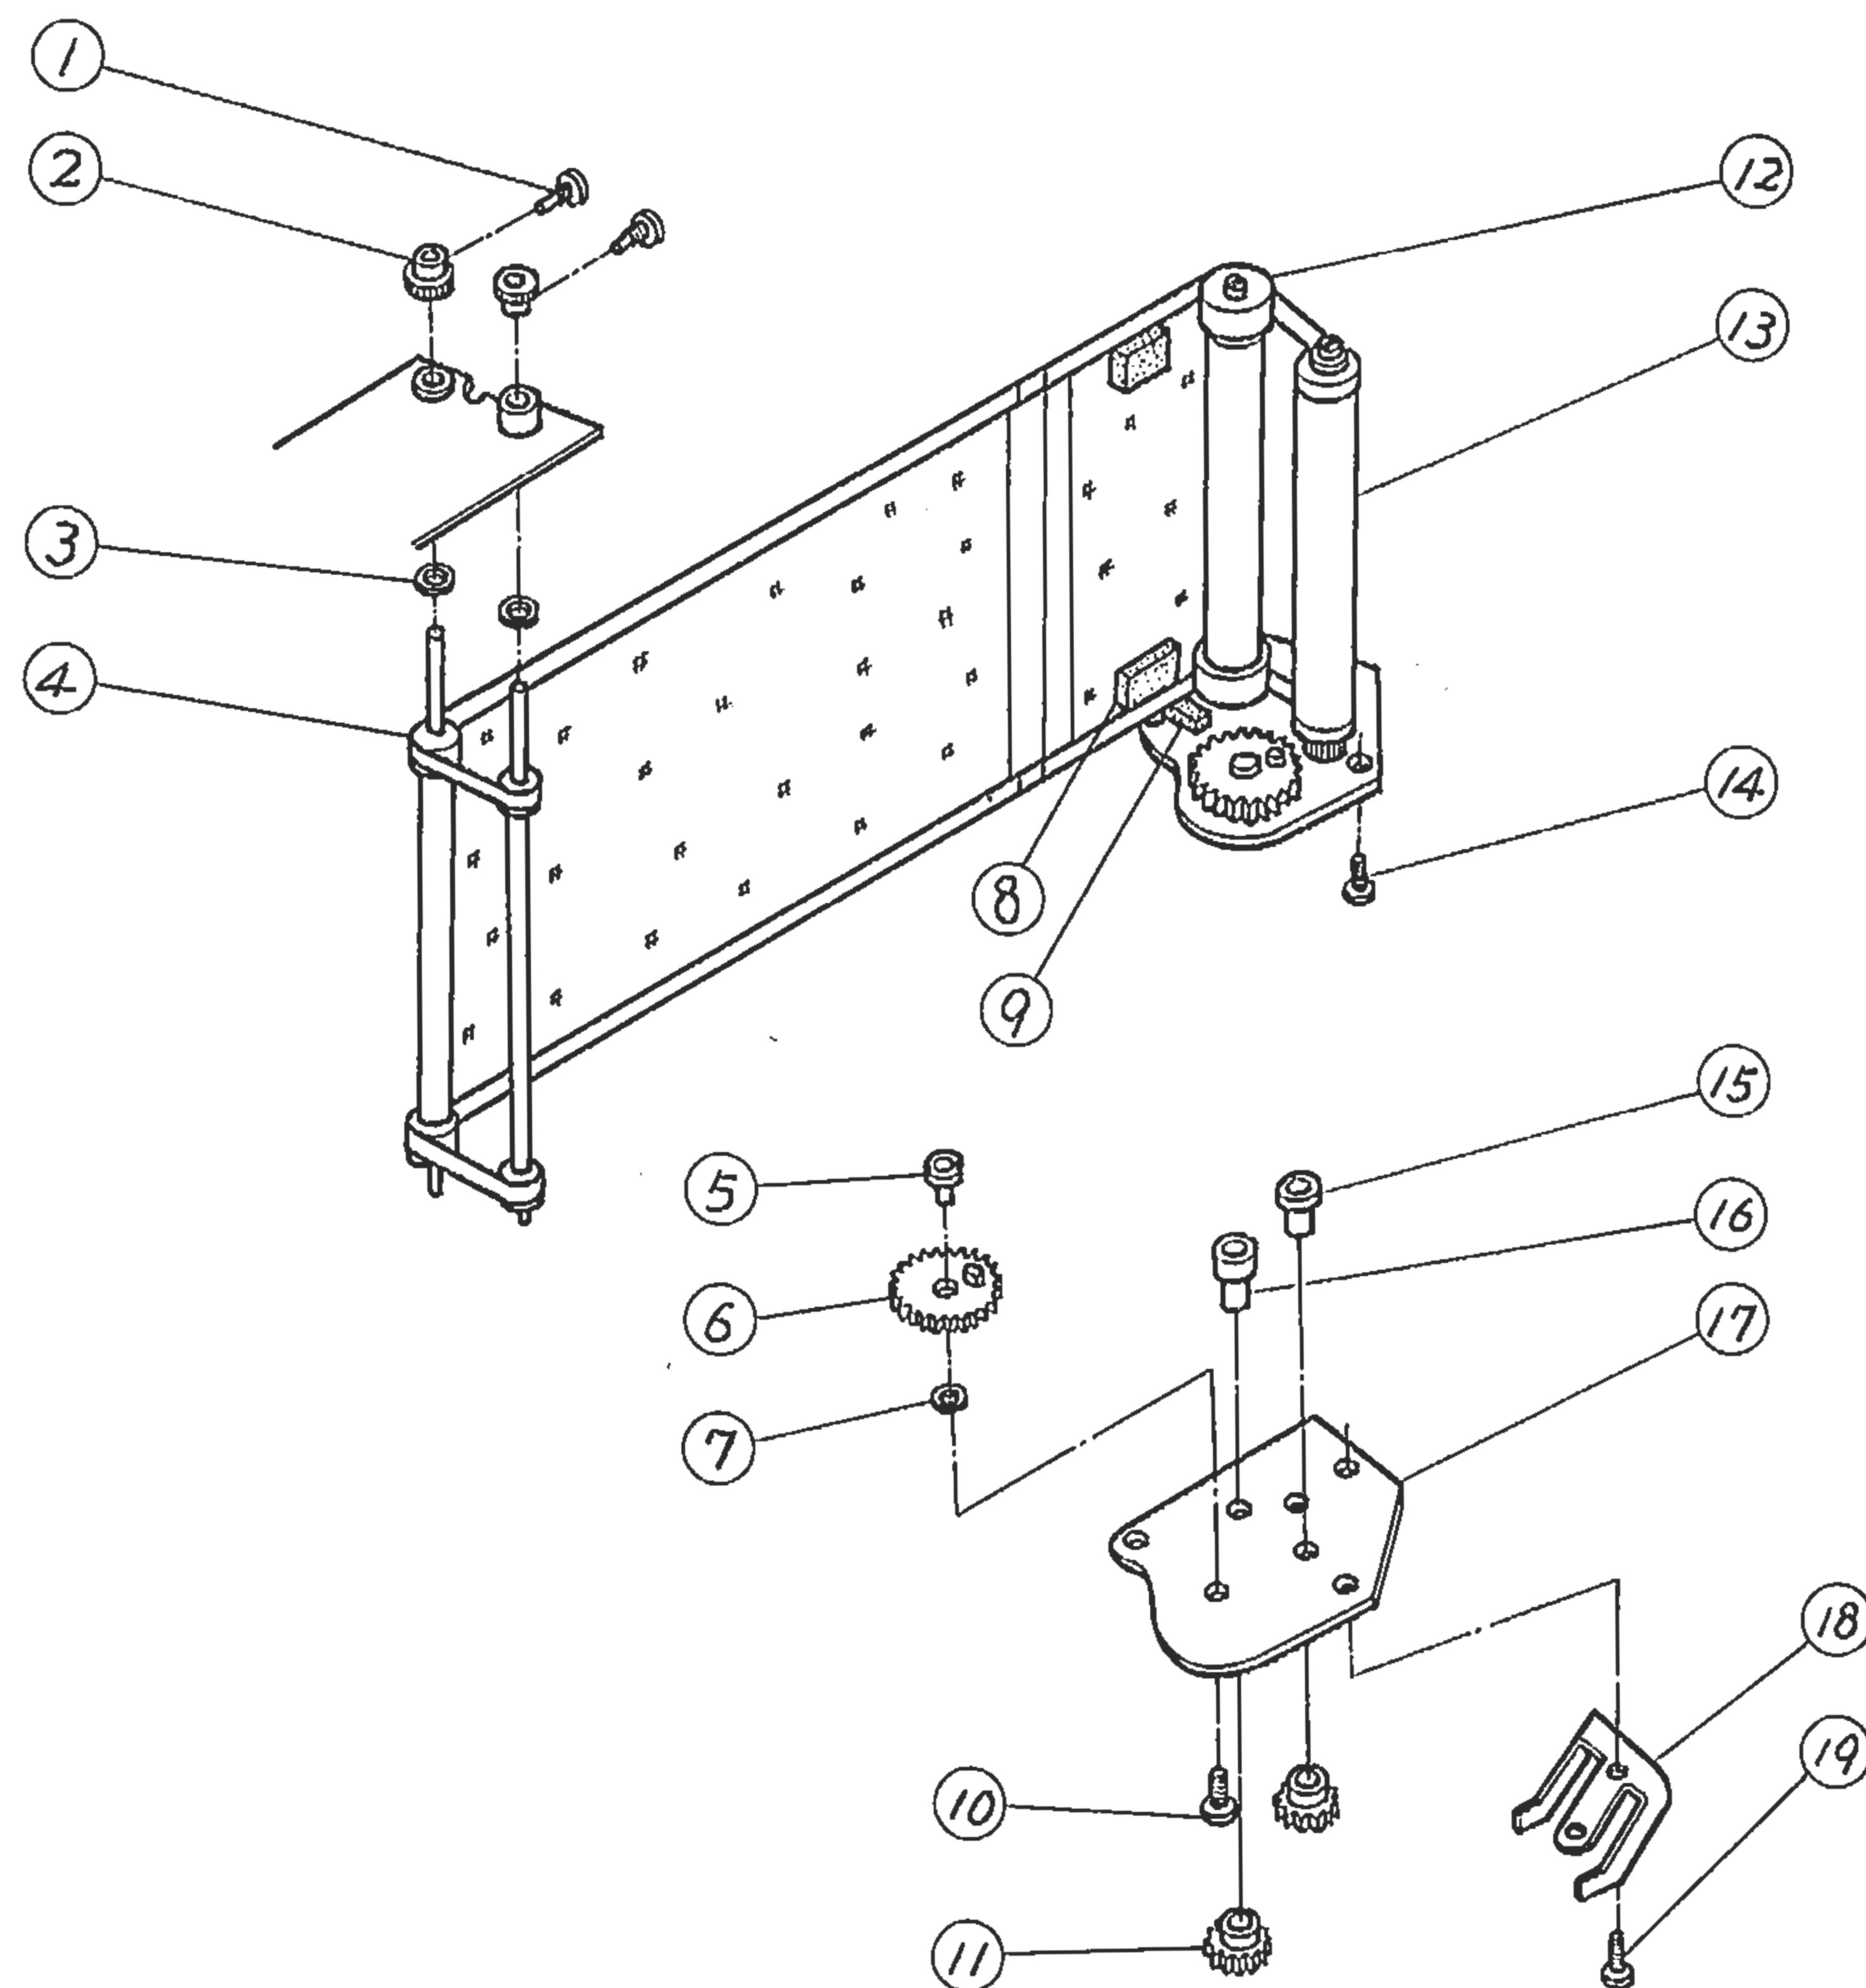

| | PARTS NO | DESCRIPTION | QTY |
|----|----------|-------------------------------|-----|
| 1 | 121233 | Curtain Shaft Gear S.S. | 2 |
| 2 | 107156 | Curtain Shaft Gear A | |
| | 107166 | Curtain Shaft Gear B | |
| 3 | 60122110 | Adjusting Washer | 2 |
| 4 | 170156 | Second Curtain Shaft Roller | 2 |
| 5 | 107186 | Restore Gear Shaft | 1 |
| 6 | 121184 | Mirror Restore Gear | 1 |
| 7 | 60252610 | Adjusting Washer | 1 |
| 8 | 107873 | Light-proof Moquette | 2 |
| 9 | 110031 | Light-proof Moquette | 1 |
| 10 | 121323 | Gear Shaft S.S. | 1 |
| 11 | 170181 | Ratchet Wheel | 2 |
| 12 | ★ | Upper Roller | 1 |
| 13 | ★ | Shutter Curtain Ass'y | 1 |
| 14 | 63913024 | Setting Screw | 3 |
| 15 | 107179 | Spring Shaft Holder | 1 |
| 16 | 170179 | First Curtain SP Shaft Holder | 1 |
| 17 | ★ | Ratchet Wheel Base Plate | 1 |
| 18 | 170182 | Pawl Spring | 1 |
| 19 | 61911524 | Setting Screw | 1 |
| | | | |
| | | | |

| OTHER ASSEMBLY PARTS | ORDER NO. | DESCRIPTION (FIG. NO.) |
|----------------------|-----------|------------------------|
| Shutter Curtain(A) | 133031 | 4.8 ~ 19. |
| | | |